



INSTALLATION INSTRUCTIONS

PERFORMANCE ELECTRONIC DISTRIBUTORS

These instructions apply to the following ACCEL products:

59107 & 59107C Performance HEI Distributor for standard deck height Chevrolet engines

The following parts are included in this package:

- 1 59107 or 59107C Performance Distributor
- 1 Coil Hardware Kit (59107 only)
- 1 Coil Mounting Kit (59107 only)

Thank you for choosing ACCEL products

A highly trained technical services department is maintained by Prestolite Performance to answer your technical questions, provide additional product information and offer various recommendations. See your local ACCEL retailer for specific prices.

Prestolite Performance
10601 Memphis Ave #12
Cleveland, OH 44144
(216) 688-8300 ext. 500
Website: www.mrgasket.com

HOW TO INSTALL YOUR ACCEL PERFORMANCE ELECTRONIC DISTRIBUTOR

ACCEL Performance Distributors are direct bolt-in replacements but offer improved performance and fuel economy potential. Although installation is easy, reading these instructions BEFORE STARTING THE INSTALLATION, will assure that you'll be able to take maximum advantage of all the performance your ACCEL Performance Distributor was designed to deliver.

Step 1 – After unpacking the distributor, check it for any damage that might have occurred during shipping, then remove the cap.

Step 2 – If the distributor to be replaced has not already been removed from the engine, pull the cap off. Unplug the pickup-to-coil harness from the cap. Do not remove the plug wires at this time. Crank the engine slowly until the rotor blade is pointed at a fixed point on the engine or firewall.

Step 3 – Unplug the distributor-to-ignition harness from the cap.

Step 4 – Note the position of the vacuum advance canister. Put a reference mark on the engine or firewall so that the new distributor may be easily installed in the same position.

Step 5 – Loosen and remove the distributor hold-down bolt and clamp. Lift the distributor out. If the engine has been running within the past few minutes, the distributor housing may be hot and coated with hot engine oil. Wrap a shop towel around the distributor to avoid burning your hands and dripping oil.

Step 6 – Lower the new distributor into position. The rotor should be pointing at the same fixed point as the discarded distributor and the vacuum canister aligned with the reference mark.

After the distributor has been lowered into place, you may find that it hasn't seated firmly against the support boss. This indicates that the lower end of the distributor shaft is not properly aligned with the oil pump drive rod. Do not attempt to force the distributor into position.

Step 7 – Reinstall the hold-down clamp and thread the bolt in just

enough to exert a very slight pressure against the distributor. If the distributor is not firmly seated, rotate the engine until it drops down into place.

Step 8 – With the distributor properly seated, tighten the hold-down bolt just enough so that the distributor is held in place, but can still be rotated with a little effort. Again, make sure that the vacuum canister is aligned with the reference mark.

Step 9 – Remove the spark plug wires one at a time from the old cap and install them in the corresponding positions on the new one. It will also be necessary to transfer the coil and coil cover from the old cap to the new one (59107 only). After all wires have been transferred, verify that the wire in the terminal post that is aligned with the rotor leads to cylinder number one. If you are unsure of cylinder number position or firing order, this information can be found in the service manual that covers your particular engine. Install the distributor cap.

Step 10 – Reconnect the pickup lead connector and the distributor-to-ignition harness into the new distributor cap.

Step 11 – Connect a timing light. Start the engine and allow it to warm up sufficiently to idle smoothly. It may be necessary to rotate the distributor (either clockwise or counter-clockwise) before a smooth idle can be achieved. If the engine will not idle smoothly, the firing order may be incorrect or the rotor may not have been properly aligned during installation. Consult a service manual for corrective procedures.

Step 12 – Consult the appropriate service manual to determine the factory recommended initial timing and idle speed. Set initial spark timing with the vacuum advance line disconnected and plugged. Advancing timing two to four degrees from the factory setting will usually provide improved performance and fuel economy. However, timing advance beyond factory specifications may result in detonation, which can cause engine damage. Listen carefully - if you hear the engine knocking or pinging, retard initial timing as required to eliminate it.

Step 13 – Insert the supplied 3/32" hex wrench in the vacuum canister nipple and rotate the adjusting screw counter-clockwise until it bottoms against its stop, then turn four complete turns clockwise. This is approximately 7" dist. (14" eng.) at approximately 12" vacuum. This is a starting point for the vacuum advance adjustment. If surging or pinging is noticed at cruise RPM, turn the adjustment counter-clockwise until condition is no longer noticed. If more advance is needed, turn adjustment clockwise.

TIPS FOR INCREASED PERFORMANCE AND GAS MILEAGE

Most distributors are equipped with two spark advance mechanisms. Centrifugal or mechanical advance is controlled by engine speed - as engine RPM increases, so does mechanical advance, up to a point. The total amount of mechanical spark lead (which varies according to the engine) is limited by a stop in the advance mechanism.

Vacuum advance is regulated by manifold vacuum which is a function of the load placed on the engine. Under light loads, such as when cruising at a steady speed on the highway, an engine can tolerate more spark advance than it can when under a heavy load such as when climbing a hill or accelerating at wide open throttle.

Vacuum advance rate may be adjusted. Again, the procedure is to run as much advance as the engine will tolerate without detonating. To increase the vacuum advance rate, insert the supplied 3/32" hex wrench in the