

# 30-4408 50 PSI BOOST GAUGE QUICK START GUIDE



## DIGITAL DISPLAY GAUGE

**Gauge Display Range:** 30inhg vacuum to 50 psi boost.

**Gauge Configuration:** The gauge bezels are threaded on to the gauge cup. Rotate the bezel in a counter-clockwise direction to remove it from the cup. Once removed, the faceplate can be changed and/or a different bezel can be installed.

**Electrical Connection:** In order to use the gauge, only the red and black wires need to be connected. The white and blue wires do not need to be connected. Connect the red wire to switched +12V. Connect the black wire to a known good ground. Plug the connector on the harness into the mating connector on the sensor. See the connection diagram below.

The **30-4408** Kit Contains:

- (1) Pressure Gauge assembly
- (1) Pressure Sensor
- (1) Pressure Cable
- (4) Butt Connector
- (1) Silver Bezel
- (1) White Boost Pressure Faceplate
- (1) 1/8 NPT-Hose Barb Boost Fitting
- (1) Tee fitting
- (1) Boost Hose
- (1) Instructions

**Sensor Installation:** Connect the 1/8 NPT-Hose barb fitting to the pressure sensor. Connect the sensor to a suitable boost line using the supplied Tee fitting and boost hose.

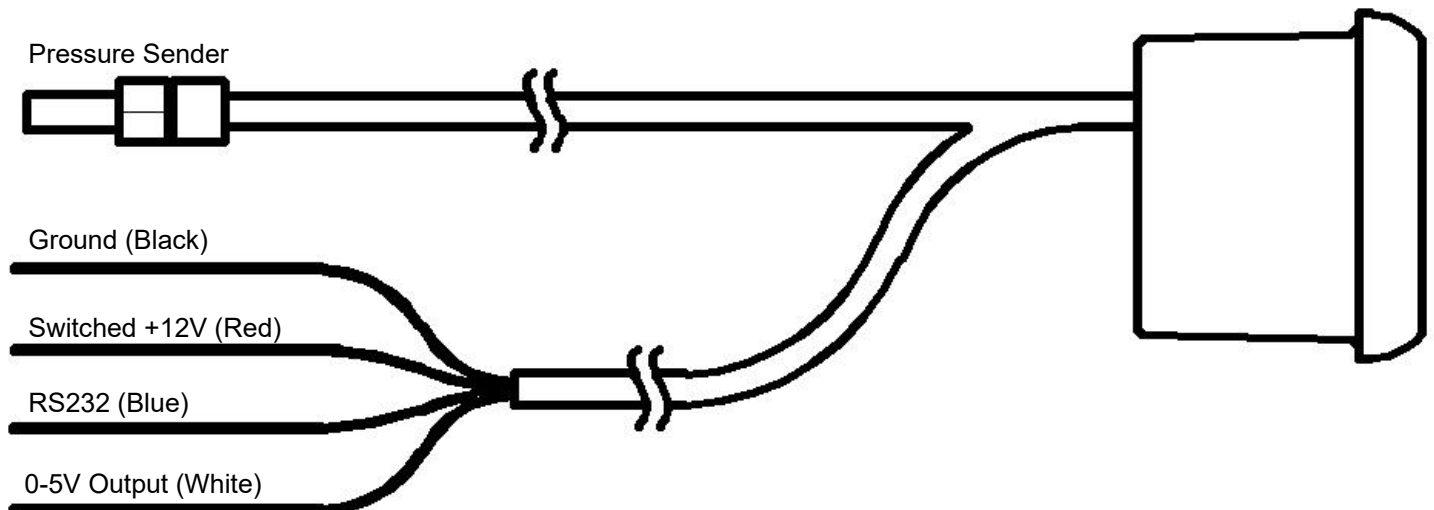


Figure 1. Connection Diagram