



## AEROMOTIVE Part # 13005 INSTALLATION INSTRUCTIONS

### CAUTION:

Installation of this product requires detailed knowledge of automotive systems and repair procedures. We recommend that this installation be carried out by a qualified automotive technician.

Installation of this product requires handling of gasoline. Ensure you are working in a well ventilated area with an approved fire extinguisher nearby. Extinguish all open flames, prohibit smoking and eliminate all sources of ignition in the area of the vehicle before proceeding with the installation.

When installing this product, wear eye goggles and other safety apparel as needed to protect yourself from debris and sprayed gasoline.

### WARNING!

The fuel system may be under pressure. Do not open [the fuel system](#) until all pressure has been relieved. Refer to the appropriate vehicle service manual for the procedure and precautions for relieving the fuel system pressure.

1. Remove pressure adjustment screw, 4 cover screws, upper spring and diaphragm assembly.
2. Unscrew and remove seat assembly. Install new seat assembly, torquing to 15-20 ft lbs.
3. Replace diaphragm assembly with new one included in kit, making sure that valve pintle is facing down.
4. Reassemble regulator using new cover screws included in kit, tightening the cover screws to no more than 22 in lbs.

