

SECTION 3: READING THE VEHICLE INFORMATION

NOTE: Please make sure that all stock electronics are turned off and disconnect any aftermarket electronics as well.

4.

5.

6

your (One) vehicle. Once married

there is an unlock fee to un-marry

the device from your vehicle in or-

der to install it on another vehicle.

PROGRAM VEHICLE


CLOUD CHECK

Press CONTINUE to query Cloud for available custom tunes.

CONTINUE

POWERING UP THE SCORCHER PRO

1. Using the provided HDMI/OBDII Cable from Section 1, plug the device into the vehicle's OBDII Port commonly found within 24" of the steering column under the driver's side dash.

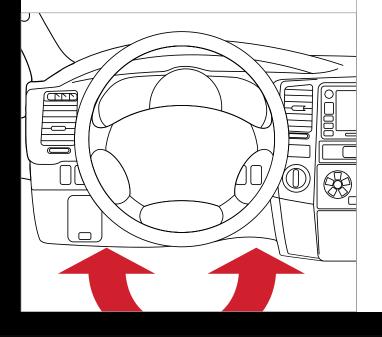

READING THE VEHICLE'S INFORMATION

- 1. At this point, the key should be in the ignition, but in the OFF position until prompted to turn key ON/RUN position.
- 2. From the Main Menu, select Program Vehicle.

<u> </u>				
3.	Processing Data: The Scorcher Pro is now reading your vehicle information.		MAIN MENU Program vehicle	
4.	Updates: Internet Require order to install the most u to-date files the Scorche now requires internet	-qu	GAUGES / DATA L VEHICLE FUNCTIO	.0G
	access. You can access these files via two methods found	PROGRAM VEHICLE UPDATE REQUIRED		
	in Section 4.	Update	required. Please check for updates	S
		EXIT	CONTINUE	

SECTION 4:

METHODS FOR UPDATING THE SCORCHER PRO

EXIT

PROGRAM VEHICLE

CONNECT TO WIFI

SSID (NETWORK NAME)

aFe

PASSCODE (SECURITY KEY)

XXXXX

CONTINU

METHOD #1: UPDATING VIA WIFI INSIDE THE VEHICLE

- 1. Select Continue from the Internet Required screen.
- 2. Select the WiFi network you would like to connect to. Use the middle button to confirm your selection.
- 3. Enter the network pass code using the arrow keys and the middle button to select.
- 4. Confirm the Wifi settings and select Continue.

METHOD #2: UPDATING VIA WIFI USING USB POWER

- 1. Plug the Scorcher Pro into a computer or wall charger using the provided Micro USB Cable.
- 2. Select "Program Vehicle" from the main menu.
- 3. "Vehicle Updates" select "Confirm".
- "Device Updates" select "Continue". 4
- 5. "Internet Required" select "Continue"
- 6. Follow on screen instruction to set up WiFi.
- 7. Follow on screen prompts until the "Up-To-Date" screen.
- 8. Unplug and return to the vehicle .

SECTION 5: TUNING THE VEHICLE

- Cloud Check If your dealer has sent you a custom tune using the cloud select "continue" to download the custom tune. If not select "Skip" and follow prompts.
- 2. Select your tune from the following menu items:

Pre-Loaded Tune Files

Preloaded aFe Power tunes for use on stock vehicles only.

Custom Tune

Custom Tuning Dealer files, if there are any on the device.

SKIP

Return to Stock

Restore original factory file to vehicle.

Highlight the tune you wish to use and select confirm. З.

Read and acknowledge the street use notice.	PROGRAM VEHICLE
Depending on your vehicle there may be further parameters you can change under "Additional Tune Option". Select "Change" to view the available options or "Skip" to continue with downloading the tune only.	STREET USE NOTICE This device is NOT LEGAL for sale or use in California on any pollution controlled motor vehicles. Press CONTINUE to start programming.
The Tune and any Additional Tune Options will now be installed. Follow the on-screen directions to finish the process.	EXIT CONTINUE
	VEHICLE LICENSE
E: During the installation the rcher. Pro will be married to	Your device is not paired. Select CONFIRM to pair your

device with this vehicle.

CONFIRM


EXIT

SECTION 6: LOADING CUSTOM TUNES

NOTE: Make sure the "Updater Software" from Section 4 Has been completed before proceeding with Section 6.


The Scorcher Pro is capable of having custom tune files sent over the Cloud straight to the device from aFe. If aFe has chosen to email your file, you can load them onto the device using the Device Updater software.

- 1. From your e-mail, save your Custom Tunes (.cef files) to your computer's Desktop.
- 2. Open the Updater software and click the Load Custom Tune File button.
- 3. Click Browse and locate your custom tunes on your Desktop. Alternatively, you can also click Locate Custom Tunes.
- 4. Highlight the Tune you wish to load. The tune you selected should move to the Available Tunes section.
- 5. Select the listed tune in the Available Tunes section, then click the >> button to move the selected tune to the On Device section.
- 6. Highlight the tune under the On Device section, then click program. Tunes can only be loaded one at a time. Repeat steps 3-7 for each tune, the device can hold up to ten custom tunes.

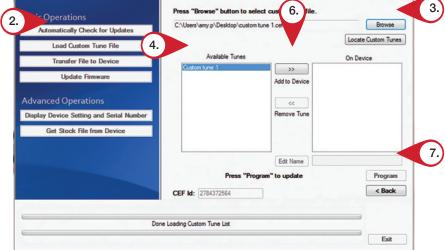

NOTE: To edit the name of the file as it appears on your device, you must highlight the file after transferring the file to the On Device section of Updater. Next to Edit Name, change the name of the file here. Select Save, then Program.

SECTION 7: ON-DEVICE DATA LOGGING

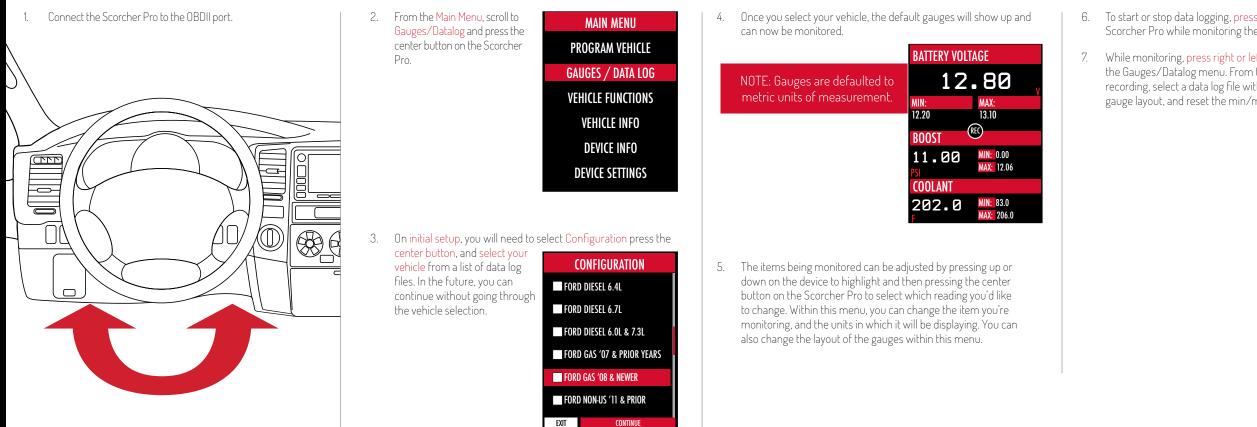

SECTION 8: ADJUSTABLE OPTIONS EXPLAINED

DIESEL VEHICLE SPECIFIC OPTIONS

Performance/Extreme The most aggressive preloaded diesel tune. Good for everyday use, racing, or economy but not recommended for any type of towing.

Street/Performance The Street tune has less power than Performance with a moderate gain over stock, safe for light towing, under 5,000 lbs.

Towing/Tow This tune should be used when towing any significant load as the shifting is specific for towing.

Trans Only For heavy loads, the engine and boost are left stock and only the transmission shift points are tuned.

Jake Brake Helps to increase engine braking while coasting to help lower braking temperatures.

Locked at CT Keeps the torque converter locked during deceleration to aid in engine braking.

Lock In 1-2-3 Locks the torgue converter in 1st, 2nd and 3rd gear.

Agg. Tow Haul More aggressive shift schedule keeping the engine in its power band longer.

DIESEL & GAS VEHICLE OPTIONS:

Axle Ratio Corrects shift patterns / speedometer for aftermarket axles / parts. (Not available on all vehicles)

Tire Size Sets tire size to correct shift patterns/speedometer. (Not available on all vehicles)

Idle Speed Sets idle speed in RPM.

Traction Control On/Off setting disables traction control without using the TCS button.

WOT Shift Increase or Decrease the WOT shift points of each gear individually by MPH.

Shift Pressure

% change in transmission pressure during shifts. (+ equals firmer, - equals softer)

GAS VEHICLE SPECIFIC OPTIONS:

Tune Type Performance levels vary by the octane you select. Higher octane will provide higher performance increase.

Towing Tune Adjusts the octane based tunes to focus more on towing over performance.

Global Spark Add or remove timing advance to the entire RPM range.

Spark by RPM Add or remove timing by RPM range. (0-2000) (2000-4000) (4000-8000)

WOT Fuel Add or remove fuel at wide open throttle. (WOT)

Fuel Injectors Allows you to adjust for different sized injectors. (Not available on all vehicles)

CMCV Deletes Updates tune to handle the CMCV/IMRC delete plates modification.

Fan Control Lowers the temperature at which the fan turns on.

Rev Limiter Drive Sets rev limit in RPM while in drive. 6. To start or stop data logging, press the center button on the Scorcher Pro while monitoring the gauges.

While monitoring, press right or left on the device to go to the Gauges/Datalog menu. From this menu, you may start recording, select a data log file with which to log, change the gauge layout, and reset the min/max values on the monitor.

Rev Limiter Neutral Sets rev limit in RPM while in neutral.

Speed Limit Remove, increase, or decrease the vehicle speed limiter. (AKA Governor)

not available on all vehicles.

SECTION 9: FREQUENTLY ASKED QUESTIONS

Q: When I try to update my tuner, it says "Please connect device" but it's already plugged in. A: This is an issue with your PC's driver software.

Q: When I connect the tuner to the vehicle, it doesn't power on.

A: Check for blown fuses specific to the OBDII Port/Cigarette Lighter for your vehicle.

Q: Does the tuner have to stay plugged in to keep the vehicle tuned?

A: No, after tuning the vehicle you can disconnect the programmer and store it.

Q: Can I stack/combine the Scorcher Pro with another chip or tuning module? A: All chips/tuning products must be removed prior to tuning with any device.

Q: Can the vehicle be tuned while the engine is running?

A: We do not recommend tuning the vehicle while the engine is running as this can cause severe damage to the vehicle and the PCM.

Q: Should I return to stock before taking my car to the dealer?

A: We recommend that you always return your vehicle to stock before returning to the dealership as this prevents the tuner from becoming locked if the dealer updates the PCM.

Q: My device is telling me my car is a Shelby GT500 when I go to program vehicle or My device says Demo Mode when I read Device Info.

A: Check device settings and look for Demo Mode. If it is on disable it by turning it to off. This will cause the device to stop identifying your vehicle as a Shelby GT500 and will now operate as needed.

Q: My vehicle is modified and I loaded a preloaded tune. Now it won't run as expected.

A: In most cases a modified vehicle requires a custom tune. There are set ups in the preloaded tune options to adapt to certain cold air intakes, however this is per vehicle and what works for one vehicle may not work on another.

Q: Can I tune more than one vehicle with this programmer?

A: No, during the installation the Scorcher Pro will be married to your vehicle. Once married there is an unlock fee to un-marry the device from your vehicle in order to install it on another vehicle.

