

510-566 INSTALLATION INSTRUCTIONS 00-02 Tundra 4.7L 01-02 Sequoia 4.7L 98-02 Land Cruiser, LX470 4.7L

Thank you for purchasing the PowerAid Throttle Body Spacer. Please read the instruction manual carefully before proceeding with the installation. Your PowerAid Throttle Body Spacer was carefully inspected and packaged. Check that no parts are missing, or were damaged during shipping.

Thank you for selecting AIRAID.



Included with your Poweraid Spacer is a sticker with a California Air Resources Board (C.A.R.B.) Executive Order (EO) number. This sticker must be placed in plain view inside of the engine compartment. Failure to do so may prevent you from passing a smog inspection.

Parts List		
AIR-KIR566PA	Aluminum Plate	(1)
AIR-KIT566H	Hardware	
"O" Rings		(3)
8mm x 100mm Bolts		(2)
8mm x 70mm Bolts		(2)
Washers		(4)
8mm Linkage Plates		(2)
8mm x 30mm Bolts		(2)
8mm x 12mm Bolts		(2)
6mm Linkage Plate		(1)
6r	mm x 16mm Flat Head Screw	(1)

Tools List


13mm Socket 3mm Hex Key Standard Screwdriver

Installation Instructions. Read Me!

1. DISCONNECT NEGATIVE (-) BATTERY CABLE.

- 2. Remove air intake hose assembly.
- 3. Remove (2) nuts and studs for throttle linkage bracket. (Ref. "E")
- 4. Remove throttle body cover bracket. (Ref. "C")
- 5. Remove throttle body and install the power plate. (Ref. "D")
- 6. Reinstall the throttle and throttle body cover brackets. (Ref. "C", "E")
- 7. Inspect & Test throttle linkage for full Open & Closed travel before driving. Some cruise or kickdown cables may require adjustment. Please refer to your vehicles service manual for proper adjustment.
- 8. Reinstall air intake hose assembly.
- 9. Reconnect battery cable. Enjoy!

The sound of power...The "whistle" means its working!

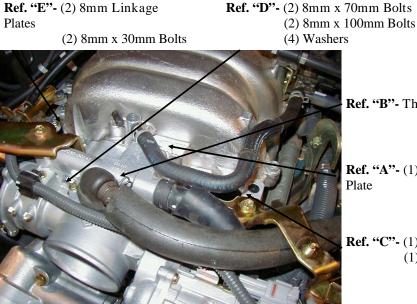

Ref. "B"- Throttle

Ref. "A"- (1) Power

Ref. "C"- (1) 6mm Linkage Plate (1) 6mm x 16mm Flat Head Screw