



OWNER'S MANUAL

⚠ IMPORTANT⚠

Before Using Your Airbed

- Inflate your airbed for several hours to allow the material to stretch naturally. The material will stretch the most after the first time you inflate it.
- As the material stretches, you may need to add more air for firmness.
 Your airbed is not leaking, it is the material stretching.
- Add air daily at first and less after a few days to maintain desired firmness.

WARNING: THIS PRODUCT IS NOT FLAME RESISTANT. THIS BED CONTAINS PLASTIC. DO NOT PLACE AIR BED NEAR OPEN FLAME OR OTHER SOURCE OF IGNITION.

WARNING: This is not a toy. To avoid risk of fire, burns, injury or shock, it should not be played with or placed where small children can reach it.

- Unplug pump when not in use.
- Pump is an electrical device. Do not use in or around water.
- Do not attempt to disassemble, repair, or service the pump. No serviceable parts are contained inside. Contact Pittman Products International at 15330 Valley View Ave. Suite 2

La Mirada, California 90638 for service or repair.

WARNING:

- This is not a water toy or flotation device. Use as a bed only.
- Not recommended for use by children under three (3) years of age.
- This bed is not intended for infants or persons with limited mobility. They may roll off of the bed and become entrapped between the bed and the sides of the truck bed or walls and suffocate.
- Do not use this bed on abrasive surfaces or near pointed, sharp or protruding objects. Bed may puncture. Remove all sharp objects from area the bed will be used in.
- Do not step or jump on bed or use as a trampoline. Standing, jumping or walking on the bed may result in injury and/or damage or puncture the bed.
- Make sure truck bed is clean of any debris, sharp objects or protrusions or place bed in a safe area before use making sure that there are no sharp edges, steps, drops, or breakable items nearby. Use on flat surfaces only. Bed may tip over on uneven surfaces.
- Do not inflate or use mattress while vehicle is in motion.

CONTENTS

- 1. AirBedz® Lite air mattress
- 2. AirBedz® Portable 12 Volt pump with 16' DC charger cord
- 3. Carrying bag
- 4. Repair patch kit includes glue


SET UP GUIDE

Your AirBedz Lite Mattress has a Two Stage Valve for easy inflation and deflation. This Valve is constructed in three parts:

- A. Valve Cap
- B. Middle Valve
- C. Bladder Valve

To Inflate:

Make sure middle valve (B) is inserted into bladder valve (C) securely.

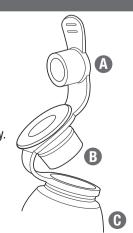

SET UP GUIDE (cont.)

INFLATION

- Place your bed in the back of truck bed or on a flat surface free of debris, obstructions and sharp objects.
- Spread the mattress out so that it can fill easily. Allowing the mattress to "unfold" itself may place an unnecessary strain on the mattress and the pump.
- Plug the AirBedz[®] portable pump into your vehicles cigarette lighter or accessory power jack.
- 4. Locate proper pump adapter fitting and insert into middle valve (B).



- 5. Turn pump on and inflate to desired firmness. To increase pump pressure and to decrease inflate time, please ensure your vehicle's engine is turned on. This will allow the pump to operate at maximum voltage (14.4V vs 12V).
- 6. Remove pump and push valve cap (A) into middle valve (B) firmly.
- 7. Unplug pump when not in use.

DEFLATION

NOTE: DEFLATE AIR MATTRESS SLIGHTLY BEFORE REMOVING FROM TRUCK BED TO AVOID SNAGGING OR TEARING MATTRESS ON TRUCK BED. IT IS BETTER TO FULLY DEFLATE MATTRESS IN PLACE TO AVOID DAMAGE.

- 1. Pull middle valve (B) from bladder valve (C).
- Fold bed according to Folding Instructions below and place into carrying bag and store until next use.

^{*} For faster inflates, you may insert pump directly into bladder valve (C) until the mattress is about 90% full. Then insert middle valve (B) into bladder valve (C) and continue to fill until desired firmness is reached.

CARE AND MAINTENANCE

- 1. Inspect your bed before each use.
- 2. Keep your bed away from any sharp or protruding objects. Large cuts, tears or snags may not be repairable and will not be covered by your warranty.
- 3. A repair patch kit has been included in case of incidental damage to your bed. Please follow repair instructions carefully.
- 4. When not in use store bed in a clean, dry place out of extreme temperatures.

CLEANING

DO NOT SUBMERGE MATTRESS IN WATER! For spot cleaning, use a clean damp cloth to wipe the surface of the mattress. Apply a clear liquid dish detergent without dye if necessary. Wet stained area thoroughly; gently massage stained area with detergent. Blot the area to remove staining substance. Rinse thoroughly and blot dry. Allow your bed to air dry completely after cleaning and before storing.

ADDITIONAL INFORMATION

IN CASE OF AIR LEAKAGE

Please check the following if there is an air leak.

1. Make sure valves are tightened to ensure leakage is not from loose valves.

A repair patch kit has been included for minor repairs. This patch kit includes everything needed to make a repair.

REPAIRING AN AIR LEAK


- Wipe bed with mild soap water over area to find possible air leak. DO NOT SUBMERGE MATTRESS IN WATER! If there is a leak bubbles will form around leakage area.
- 2. Follow cleaning instructions for leak area.
- 3. Use included patch kit to cut a suitable sized patch for leak. Make sure to round the edges of repair patch to avoid peeling.
- 4. Apply glue to patch area and around leakage area.
- 5. Press patch firmly over the puncture area.
- 6. Wait 24 hours before inflating.

To prevent patch from peeling while drying....

It is recommended to tape down patch edges with a light adhesive tape.

FOLDING INSTRUCTIONS

Upon complete deflation, lay bed on flat surface with sleeping surface facing upwards and fold according to the steps below.

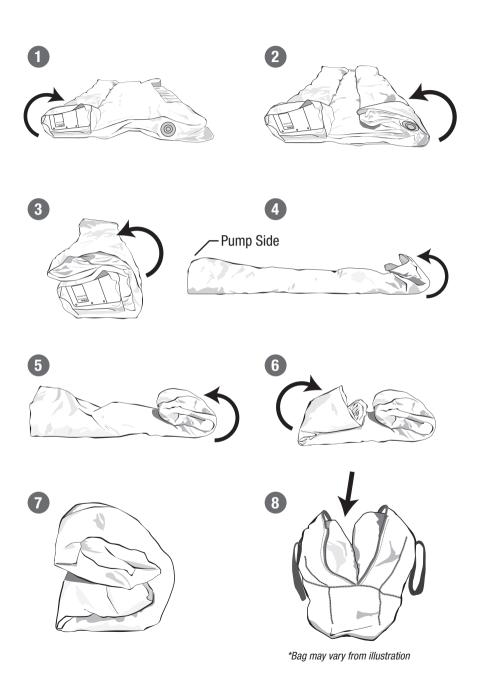

Check out the truck bed accessories we offer.