

Torque Tube Belt

Universal strap keeps torque tube stabilized and centered in case of coupler or tube failure. 3" wide black belt fits all torque tube and chassis combinations.

