



Part No. ALL72142

Inner Axle Snout Seal

Seal is pressed into the outer end of a 5x5 axle tube snout (2.5") to help prevent differential lube from entering the outer wheel bearing area and contaminating the wheel bearing grease. Seal has an outer diameter of 1.875" and an inner diameter of approximately 1.325".



REV120213

Check out an excellent selection of performance driveline & axles on our website.