



**Part No. ALL99066**  
**ALL99146**

## Indicator Lights

Indicator lights are used in Allstar Performance ignition panels to indicate when the ignition or an accessory is on. Lights may be used in a variety of other applications as needed. Lights snap into 1/2" holes in up to .065" thick material, have ring terminal connectors and are designed for 12V systems.

Part No.	Description
ALL99066.....	Red Indicator Light
ALL99146.....	Green Indicator Light



ALL99067



ALL99146