



Installation Guide for 2021-24 Toyota GR86 | Subaru BRZ NOVA-Series Prismatic LED Fourth Brake Light

ALPHAREX specializes in designing and producing superior and uniquely stylish aftermarket automotive performance lighting with unrivalled innovative technology. This installation guide takes you through the step-by-step process of installing your new **ALPHAREX LED Fourth Brake Light** for your 2021-24 Toyota GR86 | Subaru BRZ **DO NOT USE DIELECTRIC GREASE!**



Table of Contents

PART I REMOVE TAIL LIGHTS

 
- **INSTALLATION TOOLS**
- **STEP 1.** Remove the fourth brake light
- **STEP 2.** Remove the tail light
- **STEP 3.** Connect the wiring
- **STEP 4.** Install the LED fourth brake light
- **STEP 5.** Complete Installation

Disclaimer: This installation article is a tutorial guide. By reading this article, you agree it is for reference only and AlphaRex USA and its distributors make no guarantee on the finished results. Under no circumstances whatsoever shall AlphaRex USA nor its distributors be liable for any damage, misuse or personal injuries. If you do not fully understand the installation procedure, it is highly recommended that you seek help from professional mechanics to do the installation.


PART I REMOVE TAIL LIGHTS

INSTALLATION TOOLS

PREPARE THESE TOOLS FOR INSTALLATION



Metal
Panel
Popper

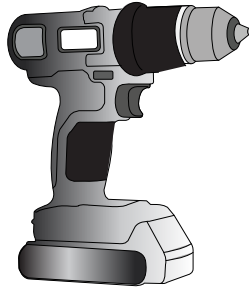

Power Tool



Phillips
Screwdriver



1/4 Ratchet



1/4 Extension

10mm



Socket

STEP 1. REMOVE THE FOURTH BRAKE LIGHT

Whenever working on your vehicle, always make sure your vehicle is OFF and parked.



Begin by extracting the three push-in pins.



Utilize a panel popper to assist in the removal of the plastic cover.



Take out the two 10mm bolts.




Detach the fourth brake light, ensuring to disconnect the light connection.






STEP 2. REMOVE THE TAIL LIGHT

To ensure proper functioning of the new ALPHAREX Fourth LED Brake Light, connect the included extension wiring to any side of the tail light. For this instruction, we recommend the driver side of the tail light.

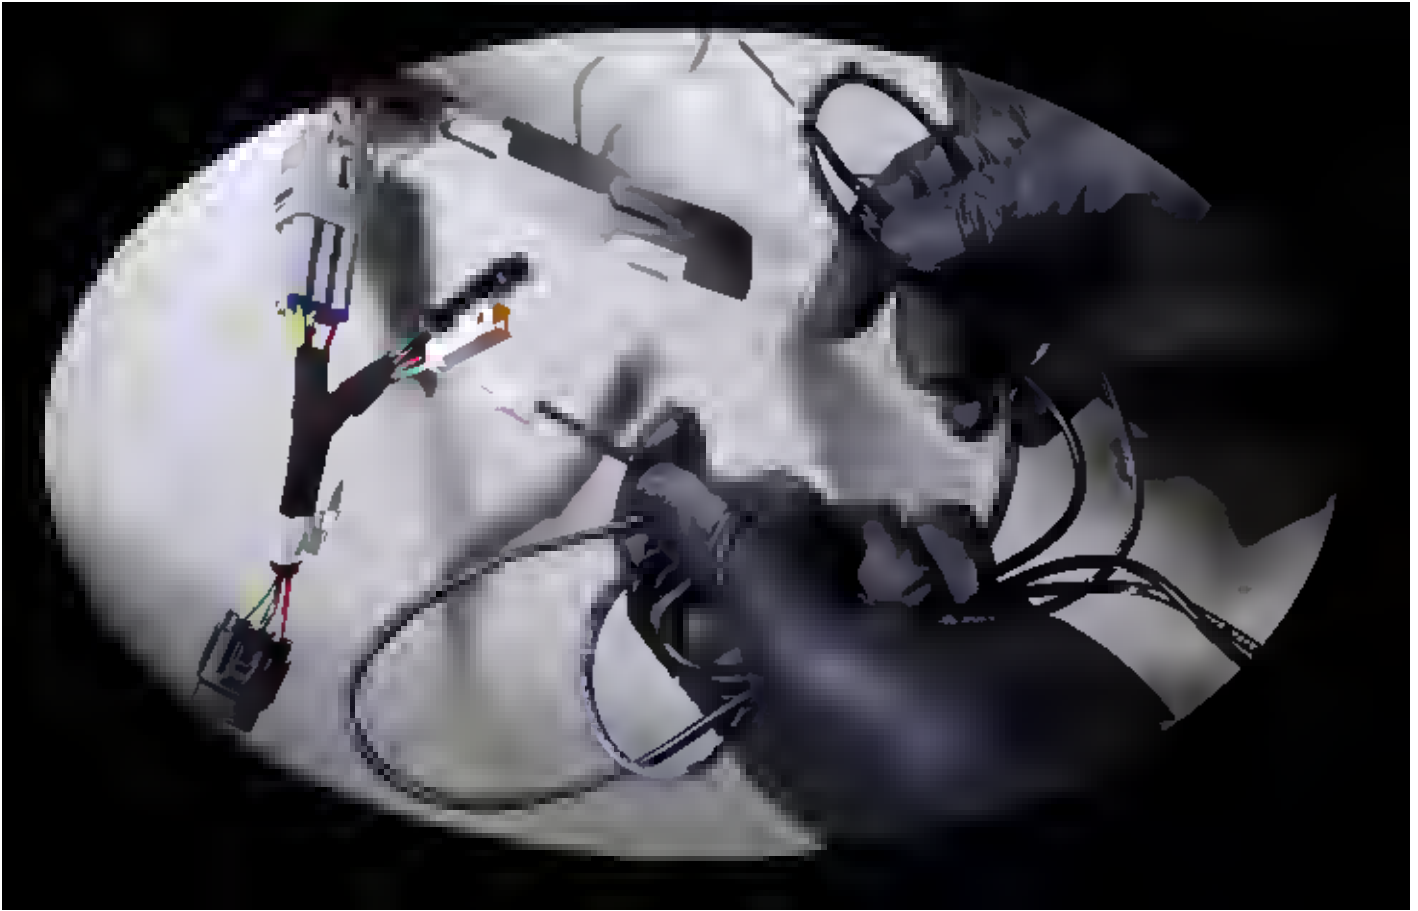

Open the trunk and start by removing the driver's side tail light assembly

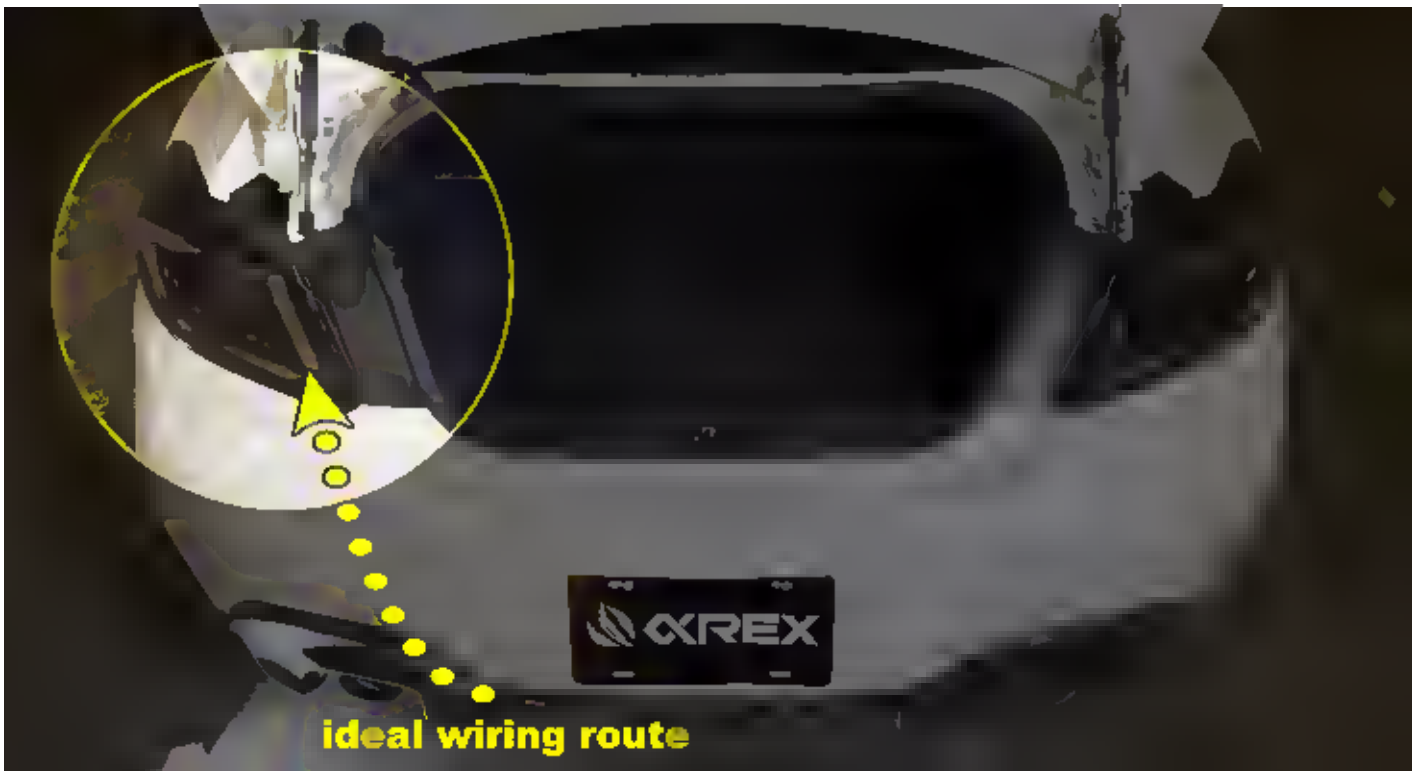

To detach the tail light, begin by raising the plastic guard cover. Loosen the 3 X 10mm bolts by turning them counterclockwise.



Carefully pull the tail light assembly outward towards you to remove it from its position.





Remove the tail light by disconnecting the plug socket.







STEP 3. CONNECT THE WIRING

Attach the provided wiring connector to the vehicle's tail light socket. **DO NOT USE DIELECTRIC GREASE!**

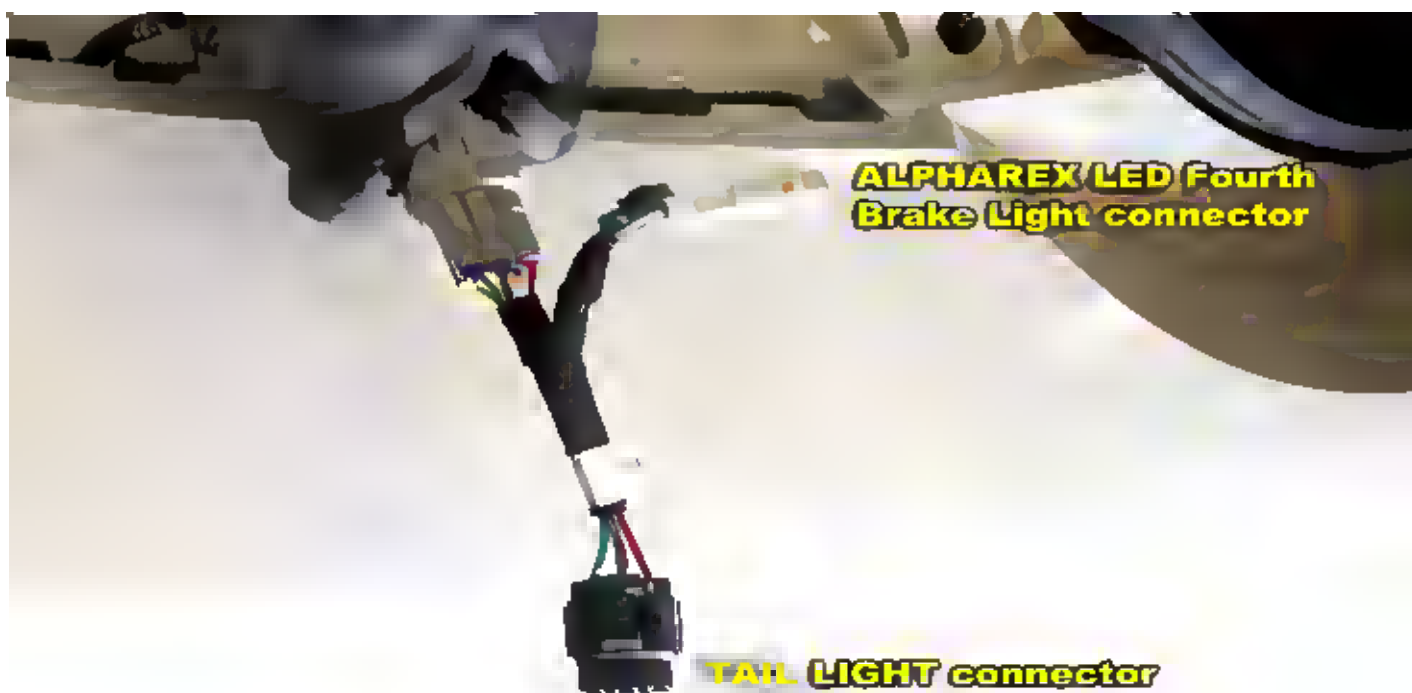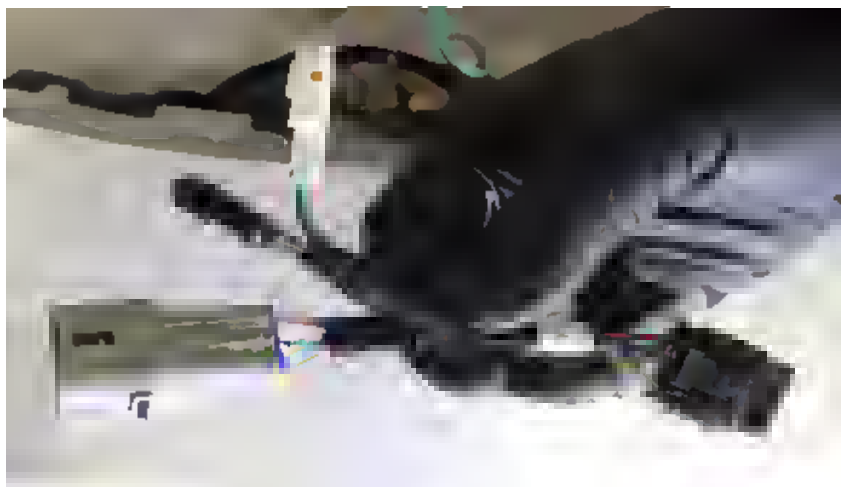

Connect the wiring extension and begin routing it towards the designated location for the ALPHAREX LED Fourth Brake Light assembly.

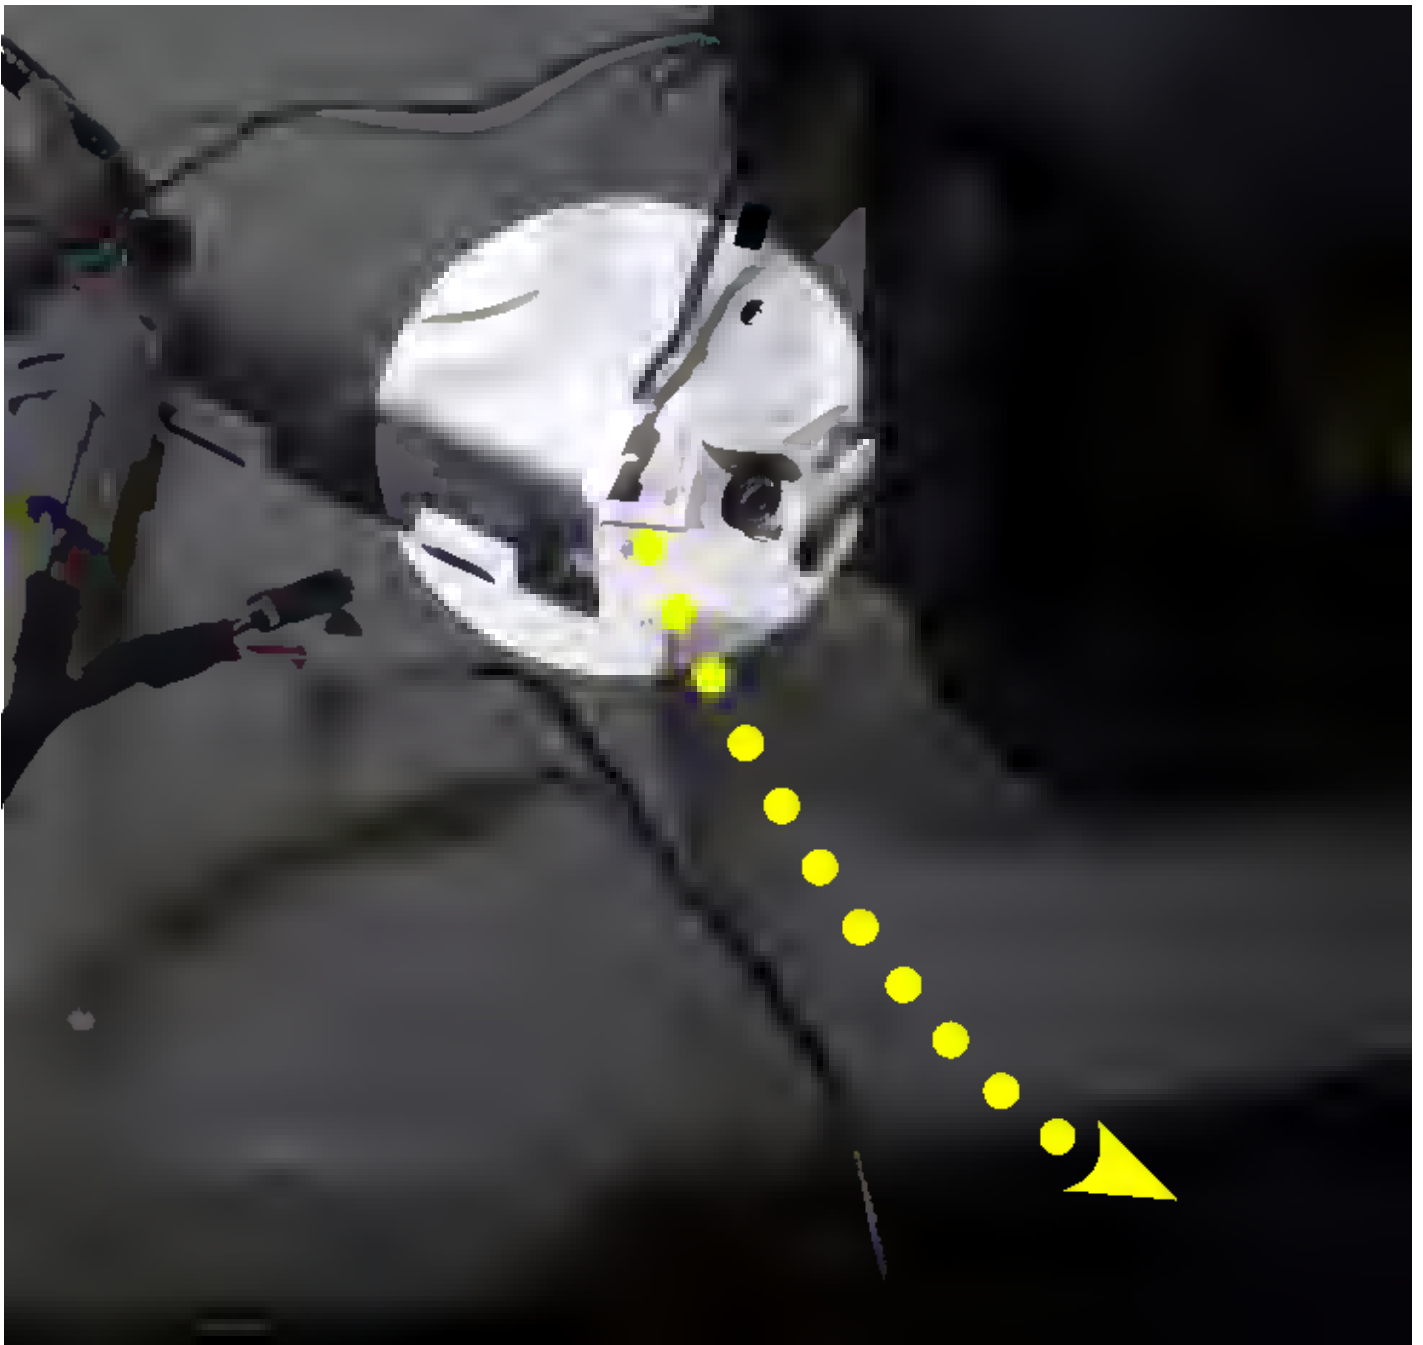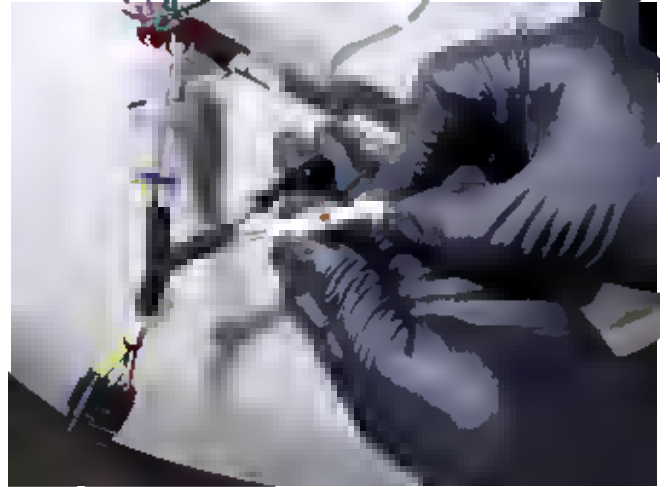



STEP 4. INSTALL THE LED FOURTH BRAKE LIGHT


First, connect the included adaptor to the vehicle's fourth brake light socket. Next, link it to the ALPHAREX LED Fourth Brake Light assembly. Additionally, connect the extension wiring connector to the ALPHAREX LED Fourth Brake Light assembly. **DO NOT USE DIELECTRIC GREASE!**



Install the ALPHAREX LED Fourth Brake Light into the vehicle.



To complete the installation, follow the reverse process used during uninstallation.

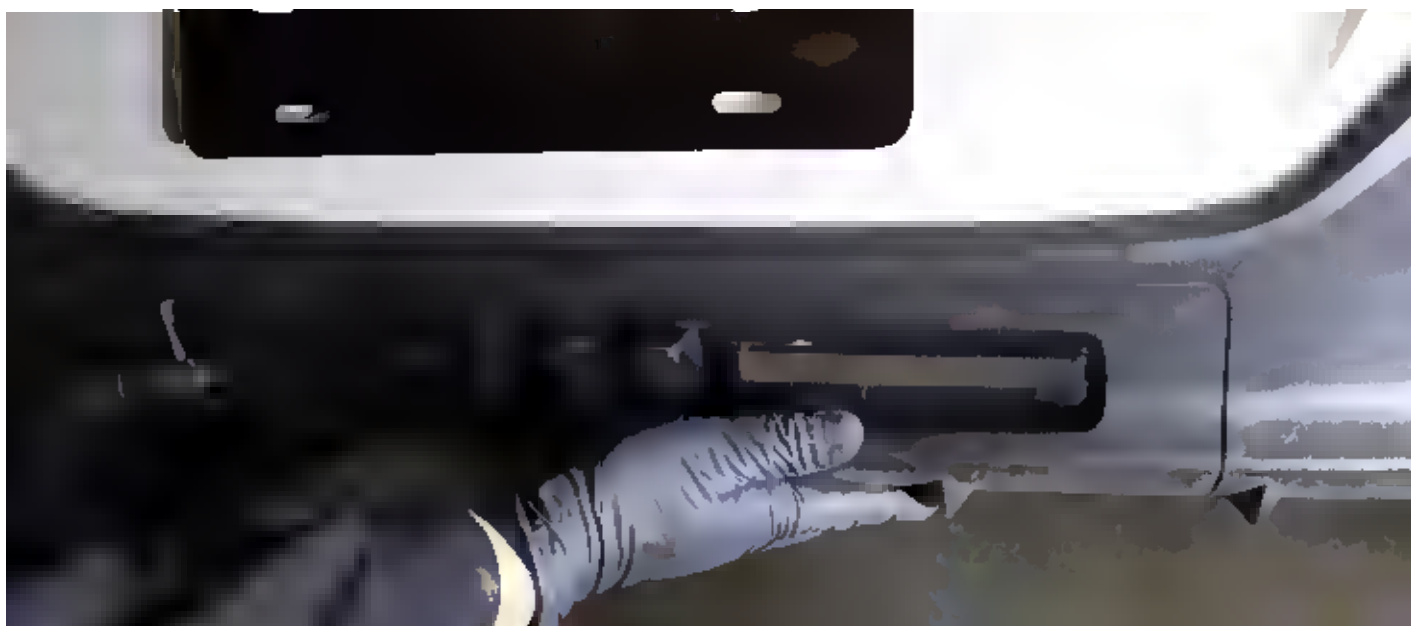

STEP 5. COMPLETE INSTALLATION

Congratulations! You have completed the installation for ALPHAREX 21-24 Toyota GR86 | Subaru BRZ LED Fourth Brake Light.

