




## Installation

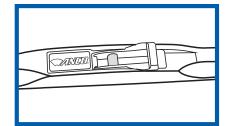


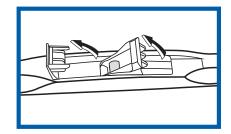

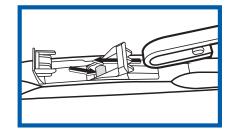


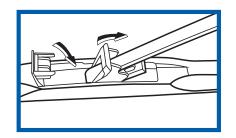


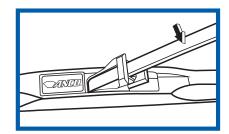

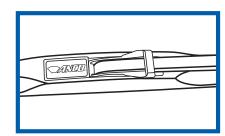

Additional connector included for applications that have a unique arm hook.

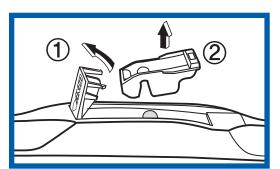

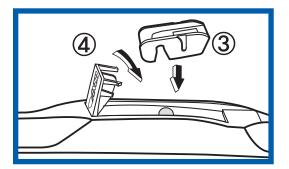




For Installations with a Standard Hook Connection...





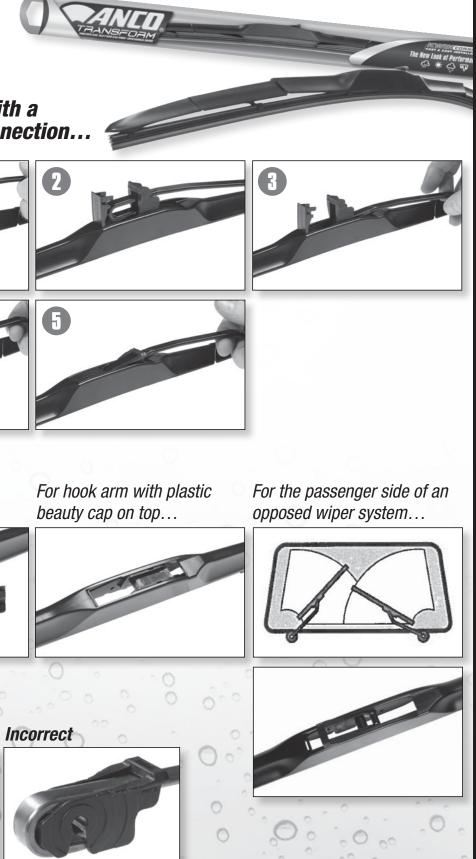

Remove the adapters shown for the following circumstances:





### INSTALLATION TIPS



INSTALLATION TIPS

0

# Beam Blade Bayonet/Side Pin Assembly and Connection

## For Installations with a **Bayonet Connection...**






# Beam Blade Pinch Tab/Top Lock Assembly and Connection





For Installations with a Side Pin Connection...

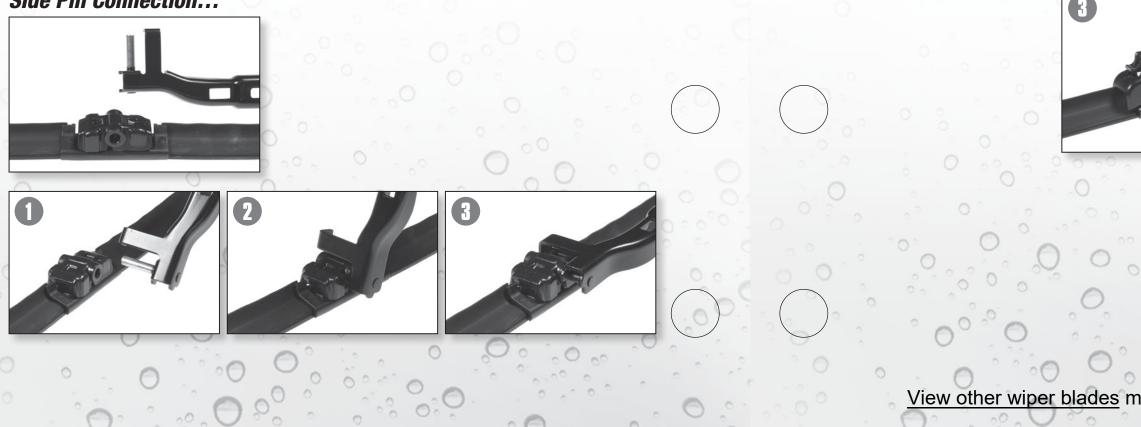

### INSTALLATION TIPS



