







Tools needed: Phillips screwdriver.



Step 3: Twist off the parking light bulb sockets.



Step 1: Remove the four

phillips screw to remove

the parking lights.

Step 4: Twist off the bulb from the socket.



Step 2: Remove the

vehicle.

parking lights from the

Step 5: Twist the new Anzo parking light bulb connector to the socket.



Step 6: Replace the four phillips screw.



Step 7: Test all functions before driving.

Anzo Lights Auto Fog Lights