

PRODUCT DESCRIPTION: Headlight
APPLICATION: 2005-2011 Toyota Tacoma



INSTALLATION GUIDE

READ COMPLETE INSTRUCTIONS BEFORE INSTALLATION
Improper installation may void warranty.



TOOLS NEEDED: 10mm Socket, Panel Popper

STEP 1



Stock Toyota Tacoma

STEP 2



Open hood and disconnect negative battery cable.

STEP 3



Remove 2 push tabs on top edge of grill.

STEP 4



Remove two 10mm bolts from top of grill.

STEP 5



Pull up on radiator grill to pop out then remove and set grill aside.

STEP 6



Remove push pin on headlight trim. Repeat on other side.

STEP 7



Use panel popper under headlight trim to release tab and remove trim. Repeat on other side.

STEP 8



Remove 3 push tabs from top of bumper.

STEP 9



Remove lower push tab on inner fender well. Repeat on other side.

STEP 10



Remove 10mm bolt connecting bumper to fender. Repeat on other side.

STEP 11



Grip back of bumper and pull forward to access headlight bolts. Repeat on other side.

STEP 12



Pull bumper forward to access side 10mm headlight bolt and remove.

STEP 13



With bumper pulled forward remove inside lower 10 mm headlight bolt.

STEP 14



Remove top two 10mm headlight bolts. Repeat steps 12-14 on other side.

STEP 15




Pull headlight out and disconnect 3 connectors from headlight. Repeat on other side.

STEP 16



For headlights equipped with CCFL-type halos continue with steps. For non-Halo headlights proceed to step 19.

STEP 17

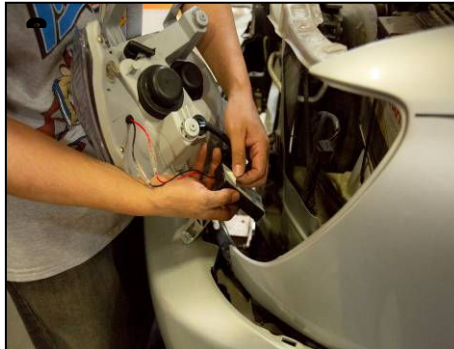

Clean contact surface area with rubbing alcohol or mild soap to remove any dirt and grime.

STEP 18




Peel 3m tape backing off inverter box. Once location of inverter box is set press onto surface securely.

STEP 19



Connect 3 connectors from vehicle to Anzo USA headlight and slide light into place.

STEP 20

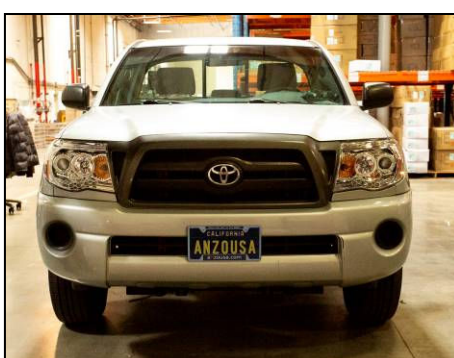

Reverse steps 2-15 to complete installation. Test all functions before driving.

AnzoUSA™ products are covered, by a limited one (1) year warranty, to be free of manufacturer's defects. However, certain AnzoUSA™ product categories have warranty policies which differ from this standard, please contact your representative for detailed category information. Damage due to improper installation or road hazards is not covered. Seller and manufacturers' only obligations shall be to replace the product proven to be defective. Neither seller nor manufacturer shall be liable for any injury, loss or damage, direct or consequential, arising out of the use of or the inability to use the product. Before using, user shall determine the suitability of the product for its intended use, and user assumes all risk and liability whatsoever in connection therewith. © 2008 AnzoUSA™. All rights reserved.