

## Load Resistor

- Solve LED related signal and [side marker](#) problems such as hyper flashing or burnt out bulb indications

### Caution:

- This load resistor gets extremely hot and needs to be installed correctly.
- The top surface of the resistor needs to make a good secure contact on a clean metal surface on your vehicle. This will act as a heat sink which should keep the load resistor cooler.
- Keep this load resistor away from oil, making contact with skin, plastic, wire and combustible gasses and material.
- We are not responsible for damage caused to persons or property with installation of the load resistor.

