



Read complete instructions before installation! Improper installation may void warranty



Tools needed Phillips Screwdriver



Remove the 2 outer screws from the stock light housing.



Pull the light assembly straight out.



Unclip the harness from the stock light.



Connect the plug from the new light to the plug coming from the vehicle.



Re-install the light using the suppiled screws. Be sure to check for proper function before operating vehicle on public highway.

Anzo Lights Automotive LED Lights