



Read complete instructions before installation! Improper installation may void warranty



Tools Needed: Phillips Screwdriver



Step 1: Open the tail gate and locate the two phillips screw and remove them.



Step 2: Pull the tail light off from the vehicle.



Step 3: Unplug the tail light wire harness.





Step 4: Take ou the new Anzo tail light from the box.



Step 5: Plug in the tail light wire harness into the new Anzo tail light.



Step 6: Test all functions to make sure of proper installation before driving.

Anzo Lights Custom Tail Lights