



Tools Needed:  
T8 torque screw driver



Step 1: Lower the tailgate exposing the two torque screws. Remove the screws.



Step 2: Remove the stock taillight by pulling straight out.



Step 3: Unplug the wire harness from the stock taillight housing.



Step 4: Plug the stock harness to the Anzo LED taillight.



Step 5: Make sure all functions are working properly before driving.

