



Read complete instructions before installation! Improper installation may void warranty



Tools needed 10mm Socket and ratchet



Start by unclipping the harness connector located under the vehicle attached to the bumper.



Remove the two 10mm bolts holding the light in. remove the light by pulling straight out.



After removing the taillight from the vehicle pull the harness straight out.



Bolt the new light back in place and connect the harness located under the vehicle. Test all functions of the light before operating on public highway.

Anzo Lights Custom Tail Lights