



Tools needed: Flat head
screwdriver, 10mm socket



Step 1: Remove the 10 push
pins from the trunk lid.



Step 2: Unscrew the emergency
tool cover.



Step 3: Pull the cover down to
expose the tail light cover and
plug the wire harness.



Step 4: Remove the tail light cover.



Step 5: Remove the 10mm bolt
from the tail light.



Step 6: Take the inner tail light
off the car.



Step 7: Remove the outer tail light
cover off.



Step 8: Unplug the wire harness
from the cover.



Step 9: Remove the three 10mm
bolts holding the tail light in.





Step 10: Pull back the trunk lining to remove the last bolt.



Step 11: Take the tail light off.



Step 12: Put the new Anzo light in and screw it on.



Step 13: Plug the new tail light wire harness in to the original wire harness.



Step 14: Put the resistors into the bottom of the tail light housing.



Step 15: Put the new cover for the light on.



Step 16: Test all functions and make sure it's working properly before driving.