



Read complete instructions before installation! Improper installation may void warranty



Tools needed: T20 torque screw



Step 3: Twist off the light bulb



Step 1: Unscrew the two torque screws located at the top of the tail light.



socket.



Step 4: Pull off the tail light from the tail light socket.



Step 2: Remove the tail light

from the bumper.

Step 5: Unclip the resistor from the light and remove the plastic cover and stick on the inside tail light housing.



Step 6: Plug in the new tail light into the light bulb socket making sure the black wire lines up with the black wire on the harness.



Step 7: Connect the resistor plug into the tail light.



Step 8: Test all functions making sure they work properly before driving.



Side by side comparison of led vs bulbs.

Custom Tail Lights Anzo Lights