

DO NOT REMOVE OR TIGHTEN AIR FITTING ON THE NEW PART



REMOVAL




Prior to inserting the existing air line into the new air fitting you will need to remove the old original equipment air line fitting.

INSTALLATION



Arnett parts come with pre-installed air line fittings for your convenience. **Do not remove or tighten.**

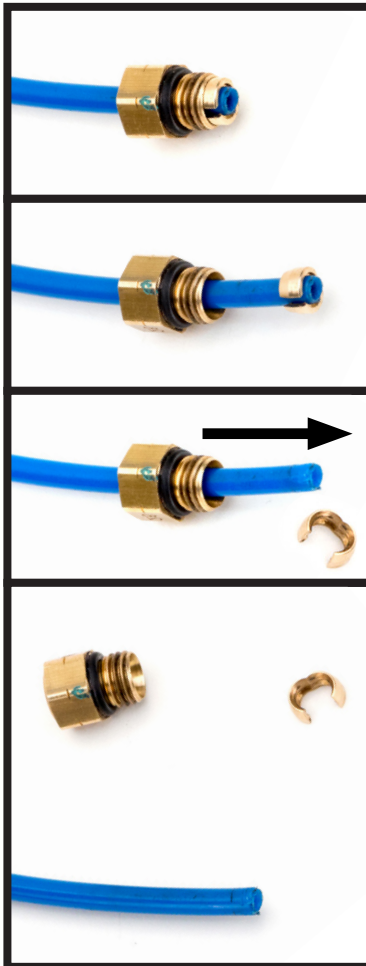

#1

OE AIR LINE FITTING

#2

SLIDE THE THREADED PORTION UP THE LINE AND SPREAD THE COLLET OPEN TO REMOVE


#3

SLIDE THE AIR FITTING OFF OF THE AIR LINE

#4

AIR LINE IS READY FOR INSTALLATION

NOTE: SCRATCHES AND/OR DEEP CUTS IN THE AIR LINE CAN RESULT IN POSSIBLE LEAKS. INSPECT THE AIR LINE BEFORE INSERTION. AIR LINE NEEDS TO BE REPLACED IF DAMAGED.

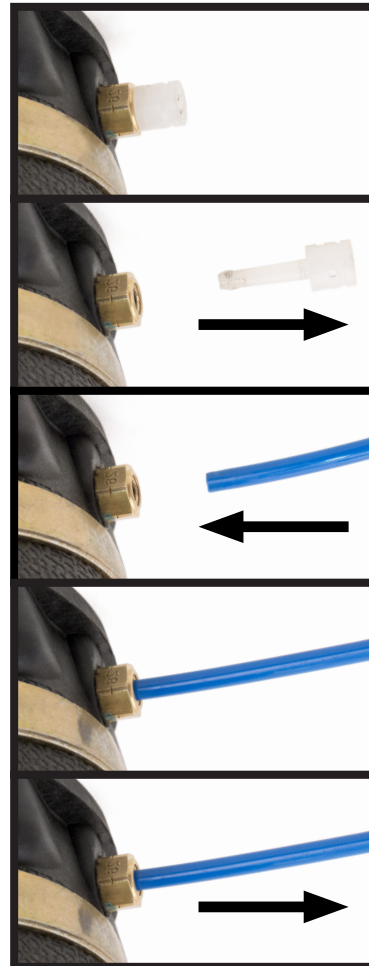

#1

AS RECEIVED

#2

REMOVE & DISPOSE OF SHIPPING PIN

#3

INSERT THE AIR LINE INTO THE FITTING AND PRESS UNTIL FIRMLY SEATED

#4

AIR LINE INSERTED

#5

PULL AIR LINE OUTWARD TO LOCK AND ENSURE A SECURE CONNECTION

Arnett® is committed to the quality of its products. If you have a question or problem with any Arnett product, please contact Arnett by calling **800-251-8993** during normal business hours or email techassistance@arnottinc.com.