



Congratulations on your purchase of an Arnott[®] air suspension product. We at Arnott Incorporated are proud to offer a high quality product at the industry's most competitive pricing. Thank you for your confidence in us and our product.

Proper installation is essential to experience and appreciate the benefits of this system. Please take a moment to review these installation instructions before you begin to install these components on your vehicle. The removal and installation of air suspension products should only be performed by a fully qualified, ASE Certified, professional.

It is equally important to be aware of all necessary safety measures while installing your new Air Suspension System. This includes proper lifting and immobilizing of the vehicle and isolation of any stored energy to prevent personal injury or property damage.

"Engineered to Ride, Built to Last™"





WARNING: The air suspension system is under pressure (up to 10 bar, or 150 lbf/in). Verify pressure has been relieved and disconnect power to the air suspension system prior to disassembly. Do not allow dirt or grease to enter the system. Always wear standard protective hand, ear, and eye protection when servicing the air suspension system.

KIT CONTAINS:

PARTS LIST		
P/N	QTY	DESCRIPTION
21-4828	1	ARNOTT FRONT RIGHT AIR SPRING ASSEMBLY
21-6470	1	ACCESSORY KIT





GENERAL INFORMATION:

- Not to be stored below 5°F (-15°C) and above 122°F (50°C).
- Avoid damage to air lines and cables.
- Removal and installation is only to be performed by fully qualified personnel.
- Use car manufacturer's diagnostic software.

CAUTION: Damage to the vehicle and air suspension system can be incurred if work is carried out in a manner other than specified in the instructions or in a different sequence.



To avoid the possibility of short circuits while working with electric components consult your owner's manual on how to disconnect your battery.



Consult your vehicle owner's manual, service manual, or car dealer for the correct jacking points on your vehicle and for additional care, safety and maintenance instructions. Under no circumstances should any work be completed underneath the vehicle if it is not adequately supported, as serious injuries and death can occur.

AIR SHOCK REMOVAL

- 1. SET STEERING TO STRAIGHT AHEAD.
- RAISE VEHICLE.
- 3. REMOVE FRONT WHEEL.
- 4. REMOVE AIR LINE FROM THE SHOCK AT THE AIR FITTING. REMOVE THE AIR LINE FITTING FROM THE AIR LINE AND DISCARD. (FIGURE A)



FIGURE A





5. REMOVETHE LOWER SHOCK-MOUNTING BOLT. (FIGURE B)



FIGURE B

6. REMOVETHE BALL JOINT NUT FROM THE SPINDLE ASSEMBLY. (FIGURE C)

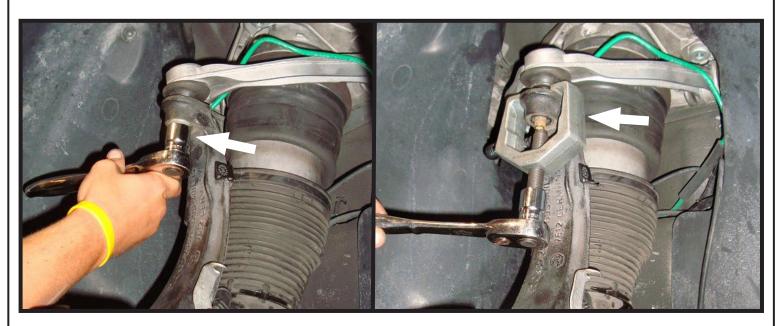


FIGURE C





7. REMOVETHE SWAY BAR END LINKTO SHOCK MOUNTING BOLT. (FIGURE D)



FIGURE D

8. DISCONNECTTHETRAVEL LINKAGE SENSOR CONNECTOR. (FIGURE E)



FIGURE E

9. LIFT HOOD AND REMOVETHETHREE (3) MOUNTING BOLTSTHAT SECURETHE SHOCK. REMOVE PLASTIC COVERTO GAIN ACCESSTOTHETHIRD BOLT. (FIGURE F)



FIGURE F





10. REMOVE SHOCK ASSEMBLY FROM THE VEHICLE. (FIGURE G)



FIGURE G

AIR SPRING DISASSEMBLY/ASSEMBLY



Air spring may be under pressure. Slowly remove the air valve to deflate.

REMOVE AND DISCARDTHE FOUR BOLTS SECURING THE AIR SPRING TO THE AIR SPRING MOUNT. (FIGURE H)



FIGURE H





2. REMOVETHETOP NUT FROMTHE AIR SPRING. REMOVE AND DISCARDTHE OLD RUBBER ROD END MOUNT ANDTHE O-RING. (FIGURE I)

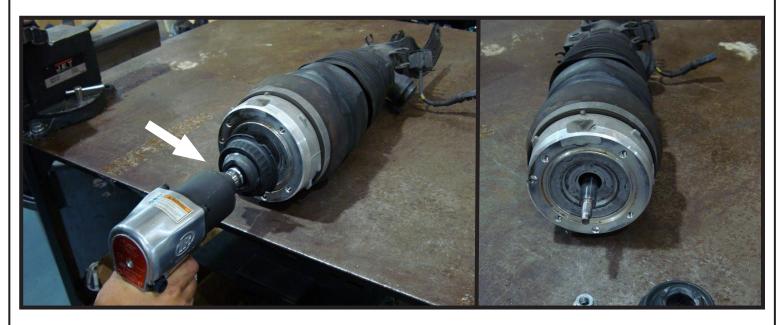


FIGURE I

3. REMOVETHE BOTTOM OF THE DUST BOOT FROM THE SHOCK. (FIGURE J)



FIGURE J





4. REMOVE AIR SPRING ASSEMBLY FROM SHOCK. REMOVETHE SHOCK O-RING AND DISCARD. (FIGURE K)

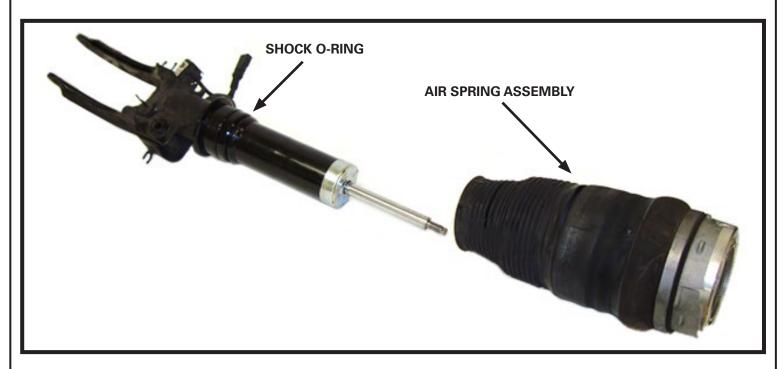


FIGURE K

5. INSTALL NEW SHOCK O-RING, APPLY LUBRICATION TO THE O-RING. USE CAUTION WHEN INSTALLING O-RING - IF DAMAGED, THE AIR SPRING WILL NOT HOLD PRESSURE. (FIGURE L)



FIGURE L





6. INSTALLTHE NEW AIR SPRING ONTO THE SHOCK. (FIGURE M)



FIGURE M

7. INSTALL THE NEW O-RING AND RUBBER ROD END MOUNT AND NUT ONTO THE SHOCK, TIGHTEN TO MANUFACTURER'S SPECIFICATION. (FIGURE N)



FIGURE N





8. ALIGNTHE AIR INLET WITHTHE SHOCK FORKS (FIGURE O).

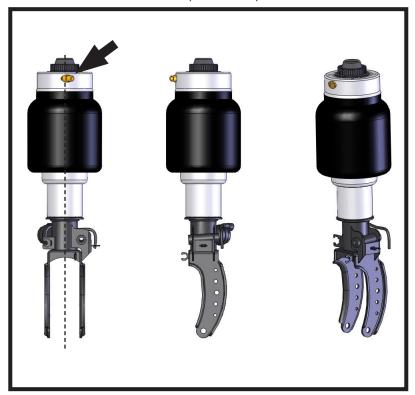


FIGURE O

9. INSTALLTHE NEW FOUR BOLTS SECURINGTHE SHOCKTOTHE SHOCK MOUNT. TIGHTENTO MANUFACTURER'S SPECIFICATIONS. (FIGURE P).

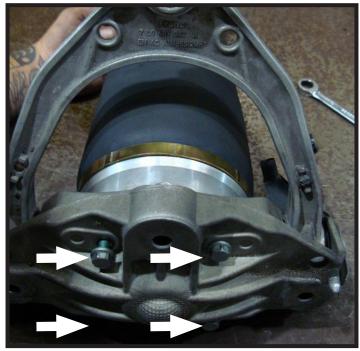


FIGURE P





AIR STRUT INSTALLATION



Tighten all nuts and bolts to manufacturer's specifications during the installation process.



Do not remove the air fitting from the air spring. Doing so may cause damage and/or void warranty. Remove the white shipping pin from the new air fitting and insert the air line until fully seated.

1. INSTALLATION IS IN REVERSE ORDER OF AIR STRUT REMOVAL.

ARNOTT SUSPENSION SUSPENSION SYSTEMS