


PARTS BREAKDOWN

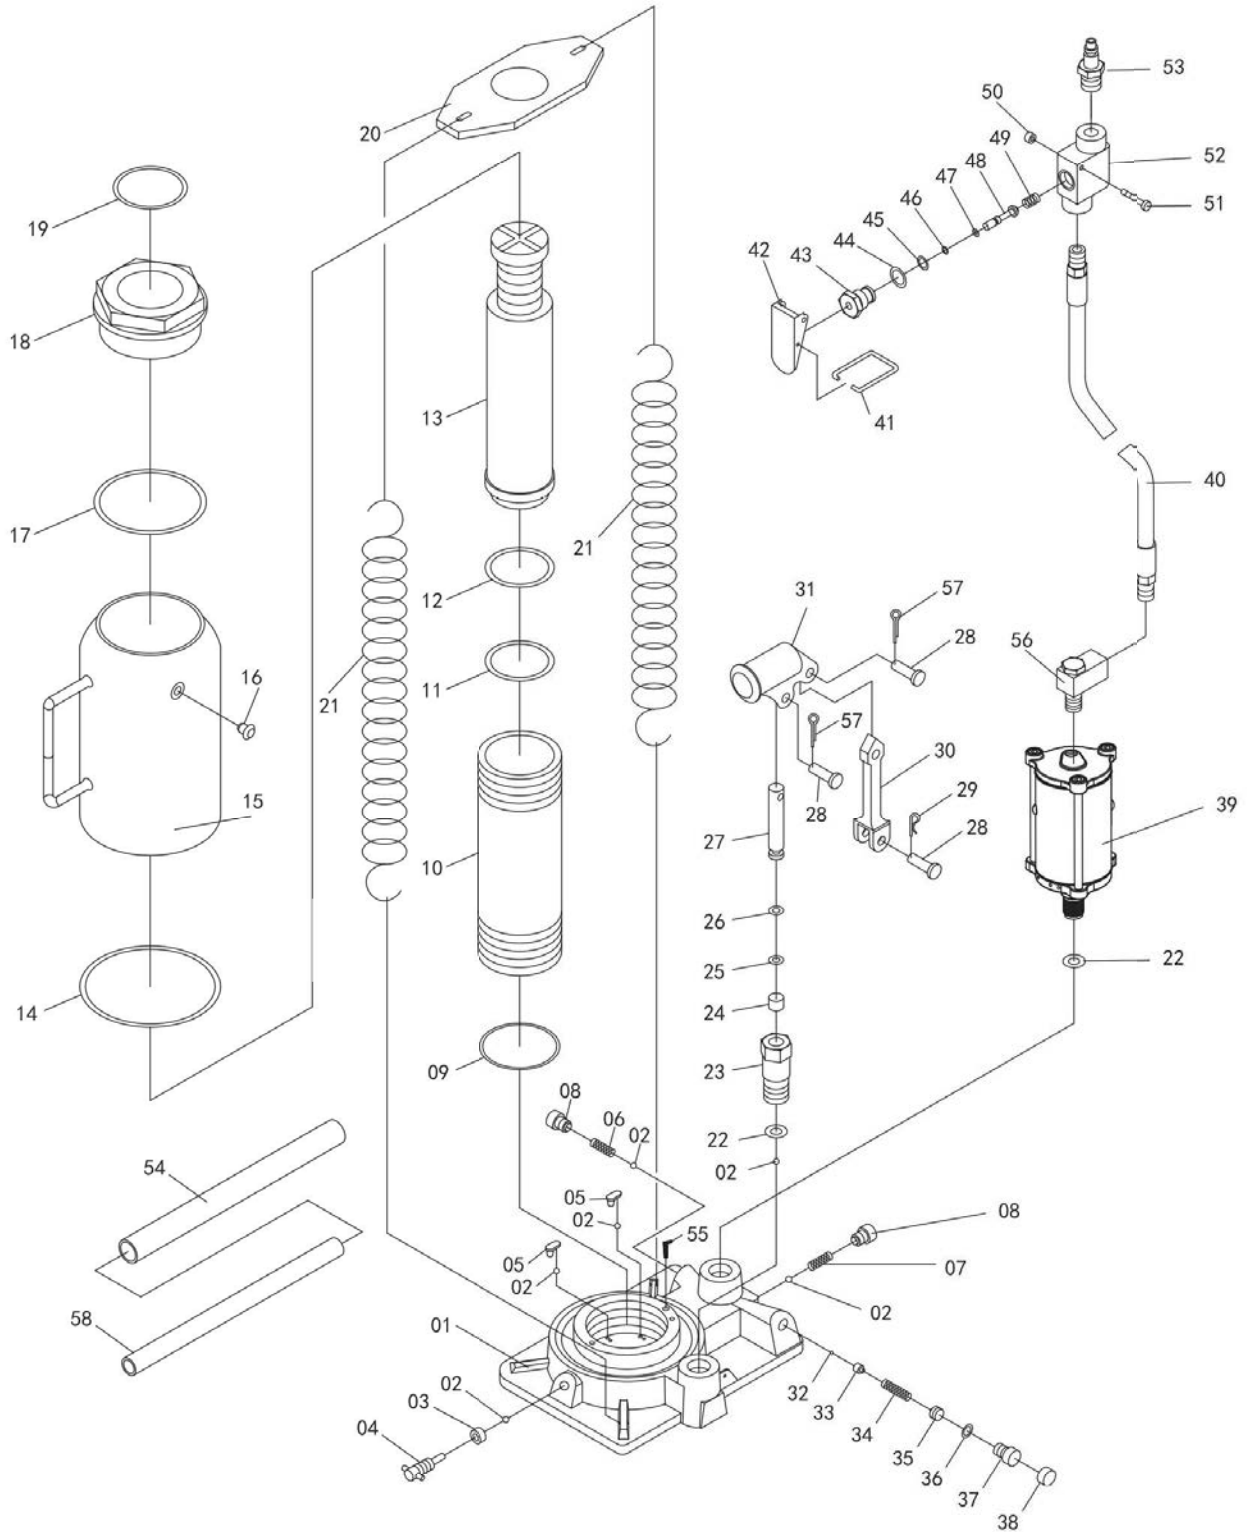

Parts List

Index No.	Part No.	Description	Q'ty
1	5302A-01	Base	1
2	5302A-02	Ball	6
3	5302A-03	Square Seal	1
4	5302A-04	Release Valve Bar	1
5	5302A-05	Ball Cup	2
6	5302A-06	Spring 1	1
7	5302A-07	Spring 2	1
8	5302A-08	Screw	2
9	5302A-09	Nylon Ring	1
10	5302A-10	Cylinder	1
11	5302A-11	O-ring	1
12	5302A-12	Cup Seal	1
13	5302A-13	Ram	1
14	5302A-14	Packing	1
15	5302A-15	Welding Assembly	1
16	5302A-16	Filler Plug	1
17	5302A-17	Washer	1
18	5302A-18	Top Nut	1
19	5302A-19	O-ring	1
20	5302A-20	Spring Plate	1
21	5302A-21	Spring	2
22	5302A-22	Washer	2
23	5302A-23	Base Of Pump Core	1
24	5302A-24	Dust Ring	1
25	5302A-25	O-ring	1
26	5302A-26	Nylon Washer	1
27	5302A-27	Pump Core	1
28	5302A-28	Pin	3
29	5302A-29	R-pin	1
30	5302A-30	Connector	1

Index No.	Part No.	Description	Q'ty
31	5302A-31	HANDLE BRACKET	1
32	5302A-32	BALL	1
33	5302A-33	BASE FOR BALL	1
34	5302A-34	SPRING	1
35	5302A-35	SCREW	1
36	5302A-36	O-RING	1
37	5302A-37	SCREW	1
38	5302A-38	PLASTIC CAP	1
39	5302A-39	AIR PUMP	1
40	5302A-40	AIR INLET HOSE	1
41	5302A-41	HOOK	1
42	5302A-42	LEVER	1
43	5302A-43	AIR VALVE CAP	1
44	5302A-44	O-RING	1
45	5302A-45	O-RING	1
46	5302A-46	O-RING	1
47	5302A-47	O-RING	1
48	5302A-48	AIR VALVE CORE	1
49	5302A-49	SPRING	1
50	5302A-50	NUT	1
51	5302A-51	SCREW	1
52	5302A-52	VALVE BODY	1
53	5302A-53	HOSE CONNECTOR	1
54	5302A-54	HANDLE	1
55	5302A-55	FILTER	1
56	5302A-56	ROTARY JOINT	1
57	5302A-57	COTTER-PIN	2
58	5302A-58	HANDLE	1