


PARTS BREAKDOWN

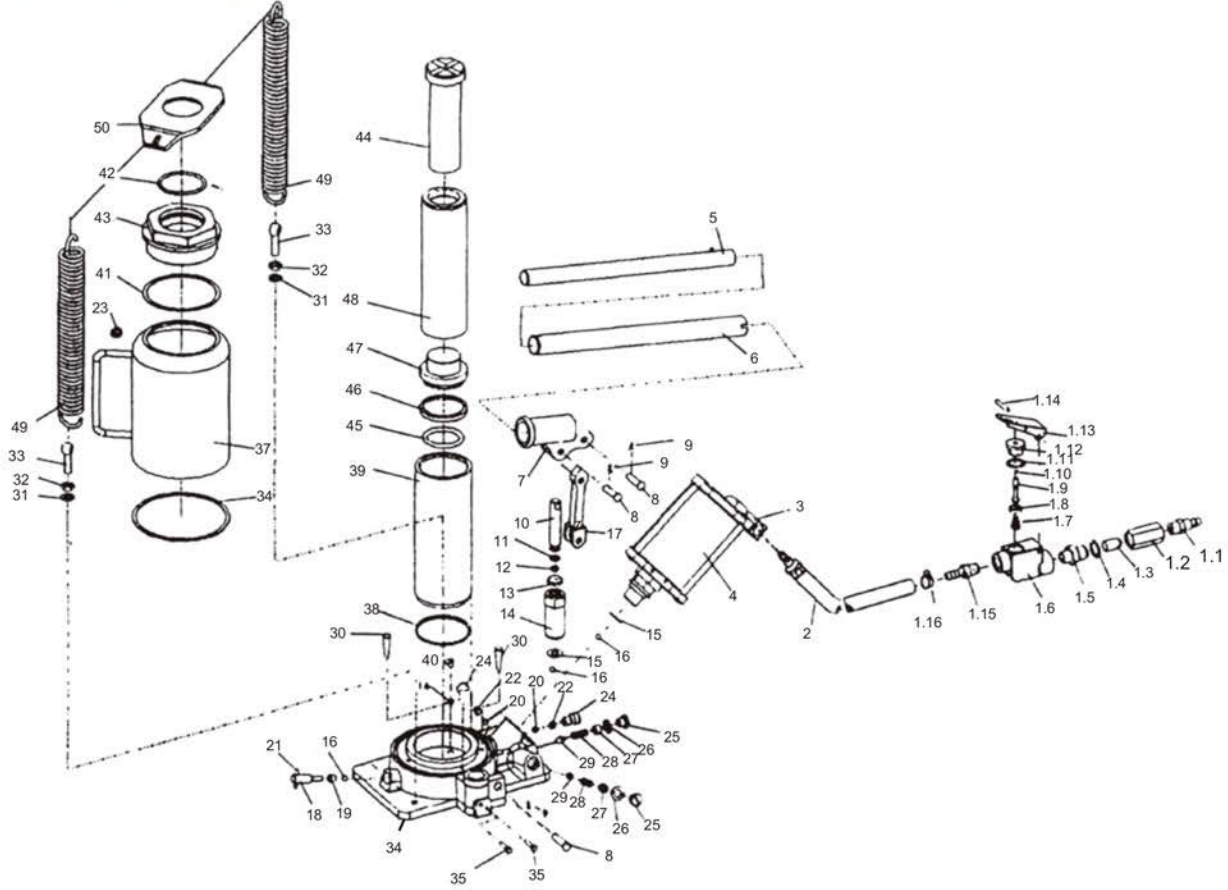

Parts List

Index No.	Part No.	Description	Qty	Index No.	Part No.	Description	Qty	Index No.	Part No.	Description	Qty
1.1	5304-1.1	Hose Connector	1	8	5304-8	Shaft Pin	3	30	5304-30	Filter Net	2
1.2	5304-1.2	Connecting Nut	1	9	5304-9	Cotter Pin	3	31	5304-31	Spring Washer	2
1.3	5304-1.3	Air Filter	1	10	5304-10	Pump Plunger	1	32	5304-32	Nut 8	2
1.4	5304-1.4	"O" Ring 18 x 24	1	11	5304-11	Pump Plunger Retainer	1	33	5304-33	Bolt M8 x 35	2
1.5	5304-1.5	Connector	1	12	5304-12	"O" Ring	1	34	5304-34	Base	1
1.6	5304-1.6	Valve Body	1	13	5304-13	Dust Proof Ring	1	35	5304-35	Plug Screw	4
1.7	5304-1.7	Spring	1	14	5304-14	Pump Reservoir	1	36	5304-36	Cylinder Bottom Seal	1
1.8	5304-1.8	Packing	1	15	5304-15	Copper Washer	1	37	5304-37	Reservoir	1
1.9	5304-1.9	Throttle	1	16	5304-16	Steel Ball 6	6	38	5304-38	Packing	1
1.10	5304-1.10	"O" Ring 3 x 1.6	1	17	5304-17	Plunger Convecting Rod	1	39	5304-39	Cylinder	1
1.11	5304-1.11	"O" Ring 18 x 2.4	1	18	5304-18	Release Valve screw	1	40	5304-40	Stell Ball Retainer	2
1.12	5304-1.12	Nut	1	19	5304-19	Release Vale Seal	1	41	5304-41	Cylinder Top Seal	1
1.13	5304-1.13	Lever	1	20	5304-20	Steel Ball 6.35	1	42	5304-42	"O" Ring	1
1.14	5304-1.14	Lever Rin	1	21	5304-21	Pin	1	43	5304-43	Top Nut	1
1.15	5304-1.15	Hose Connector	1	22	5304-22	Valve Spring	2	44	5304-44	Extension Screw	1
1.16	5304-1.16	Hose Band	2	23	5304-23	Filler Plug	1	45	5304-45	"O" Ring	1
2	5304-2	Air Hose	1	24	5304-24	Screw	2	46	5304-46	"O" Ring Returner	1
3	5304-3	Connector	1	25	5304-25	Plug Screw	2	47	5304-47	Ram Header	1
4	5304-4	Air Pump	1	26	5304-26	Plug Washer	2	48	5304-48	Ram	1
5	5304-5	Handle Upper	1	27	5304-27	Overload Valve Screw	2	49	5304-49	Spring	2
6	5304-6	Handle lower	1	28	5304-28	Safety Valve Spring	2	50	5304-50	Spring Plate	1
7	5304-7	Plunger	1	29	5304-29	Overload Tapering Valve	2				