


OPTION

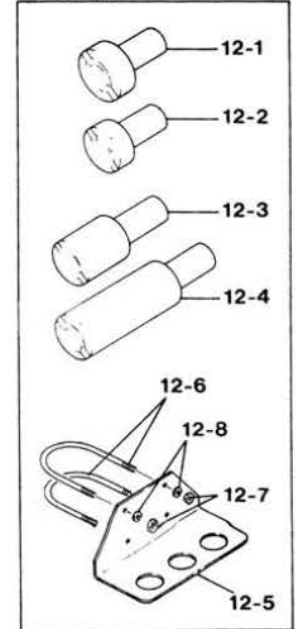

Parts No.	Parts Name	Q'ty/set
1-1	Wheel shaft	2
1-2	Washer	2
1-3	Wheel	2
1-4	Snap ring	2
2-0	Piston rod ass'y	1
● 2-1	● Piston rod (1 piece)	
● 2-2	● Packing (1 piece)	
● 2-3	● Screw (1 piece)	
● 2-4	● Bush (1 piece)	
● 2-5	● Spring pin (1 piece)	
● 2-6	● "O" ring (1 piece)	
● 2-7	● Packing retainer (1 piece)	
2-8	Cylinder	1
2-12	Bolt	2
2-13	Packing	2
2-14	Spring retainer	1
2-15	Safety valve	1
2-16	Spring	1
2-17	Nut	1
2-18	Oil seal	1
2-19	"O" ring	2
2-20	Oil tank	1
2-21	Spring	2
2-22	Spring hunger	1
2-23	Machine screw	1
2-24	Nut	1
2-25	Oil strainer	1
2-29	Packing	1
3-2	Oil box	1
3-4	Bolt	1
3-5	Spring	1
3-6	Steel ball	1
3-7	Steel ball	1
3-8	Copper packing	1
3-9	Separator	1
3-12	"O" ring	4
3-13	Bolt	4
3-14	Spring washer	1
4-0	Release valve ass'y	1
● 4-1	● Valve (1 piece)	
● 4-2	● "O" ring (1 piece)	
● 4-3	● Guide (1 piece)	
● 4-4	● Universal joint (1 piece)	
● 4-5	● Spring pin (1 piece)	
● 4-6	● Spring pin (2 pieces)	
● 4-8	● "O" ring (1 piece)	
● 4-9	● Collar (1 piece)	
● 4-10	● Packing (1 piece)	
● 4-11	● Snap ring (1 piece)	
5-1	Handle	1
5-2	Knob	1
5-3	Connecting rod	1
5-4	Spring pin	1
5-5	Stopper	1
5-6	Lock lever	1
5-7	Spring pin	1
5-8	Spring	1
5-9	Washer	3
5-10	Grip	2
5-11	Handle fork	1
5-12	Bolt	1
5-13	Spring washer	1
5-14	Connecting rod	1
5-15	Connecting rod	1
5-16	Universal joint	1
5-17	Spring pin	1
5-18	Spring pin	1

Parts No.	Parts Name	Q'ty/set
5-19	Cotter pin	1
5-20	Cotter pin	1
5-21	Bolt	2
6-1A	Frame(RH)	1
6-1B	Frame(LH)	1
6-3	Handle fork bracket	1
6-6	Upper cover	1
6-7	Machine screw	4
6-8	Lock washer	4
6-9	Bolt	4
6-10	Spring washer	4
6-12	Bolt	4
6-13	Bolt	4
6-14	Spring washer	4
6-15	Spring washer	4
6-16	Lower cover	1
7-1	Air pump body	1
7-2	Servo valve	1
7-4	Packing guide	1
7-5	Bolt	1
7-6	Lock washer	1
7-7	Packing	1
7-8	Muffler cover	1
7-9	Bolt	3
7-11	"O" ring	1
7-12	Valve seal	1
7-13	Bolt	4
7-14	Spring washer	4
8-1	Air piston	1
8-2	Piston seal	1
8-3	Spring	1
8-4	Spring retainer	1
8-5	Plunger	1
8-6	Cylinder	1
8-7	"O" ring	1
8-8	Back-up ring	1
8-9	Nut	1
8-10	"O" ring	1
8-11	Packing	1
10-0	Air valve ass'y	1
● 10-1	● Valve body (1 piece)	
● 10-2	● Nut (1 piece)	
● 10-3	● "O" ring (1 piece)	
● 10-4	● "O" ring (1 piece)	
● 10-5	● Packing (1 piece)	
● 10-6	● Throttle (1 piece)	
● 10-7	● Spring (1 piece)	
● 10-8	● Lever (1 piece)	
● 10-9	● Lever pin (1 piece)	
● 10-10	● Lock lever (1 piece)	
● 10-11	● Hose connector (1 piece)	
● 10-12	● Pump elbow (1 piece)	
● 10-13	● Hose connector (1 piece)	
● 10-14	● Spring (1 piece)	
● 10-15	● Air hose (1 piece)	
● 10-16	● Hose band (2 pieces)	
Option		
12-1	Adaptor-A	1
12-2	Adaptor-B	1
12-3	Adaptor-C	1
12-4	Adaptor-D	1
12-5	Holder adaptor	1
12-6	U-Bolt	2
12-7	Nut	4
12-8	Spring washer	4