


Pillar installation Directions:**Read directions before starting installation.**

- 1) Remove Stock Pillar by removing the screw located under the cap(s) of pillar handle.
(Photo 1)
- 2) Install Gauges in new pillar.
- 3) Tape or secure gauge wiring to back of pillar.
(Photo 2)
- 4) Install new pillar in place of old pillar.
- 5) Use provided screw to hold pillar in place:
 - Make sure screw is aligned with factory hole to avoid cross threading
 - Don't over tighten screw(Photo 3)



Dodge Ram Shown (Photo 1)

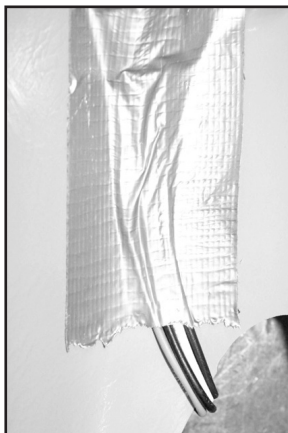

(Photo 2)



(Photo 3)