INSTALLATION INSTRUCTIONS 2-1/16" Replacement Pillar F-150 15+ / Super Duty 17+ w/Speaker



Read through directions completely before starting installation.

1) Open factory handle covers and remove bolts w/10mm socket



 Install supplied snap nut into lower portion of slot



- Detach factory pillar by pulling towards yourself, then slide upwards towards headliner to release tabs from dash.
- 3) Unclip wire harness from speaker.
- supplied 4-40 screws

4) Remove factory speaker and

grill. Install into pillar using



 Insert screw into pillar, slide spacer over screw, align screw with snap nut and attach



6) Connect speaker wire, insert bottom of pillar into dash area first.

NOTE: Caution must be taken NOT to over-tighten screw!