

INSTALLATION INSTRUCTIONS **IN-DASH ELECTRIC TACHOMETER** WITH INCANDESCENT LIGHTING



PART NUMBER P5155707

Calibration

IMPORTANT: This tachometer is factory calibrated to operate on 8 cylinder engines. For 4 or 6 cylinder engines, it is necessary to make the proper adjustments to adapt this tachometer to your cylinder range.


Locate the black plastic plug covering the switch access hole. Remove the plastic plug covering the access hole. Use a small screwdriver or an unwound paper clip to change the switch settings. Move each of the two switches to the proper cylinder selection according to the diagram illustrated on the right. Reinstall the plastic plug/cap into the access hole.

NOTE: This tachometer has an air core meter. With power off, It is normal for the pointer to leave zero. When power is applied, the pointer will move to the correct position.

Figure A.

4 CYL. - Switch One up, Switch Two down 6 CYL. - Switch One down, Switch Two up

8 CYL. - Both switches up

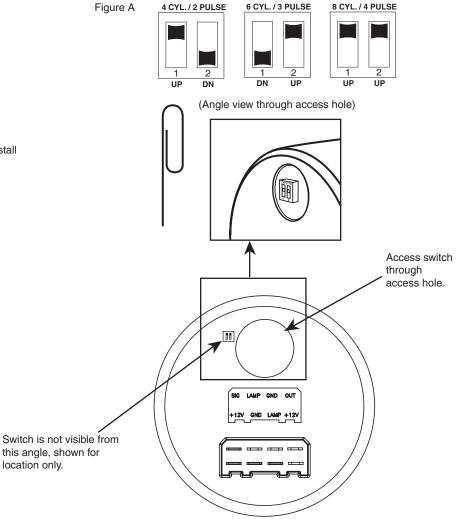

Lens Cleaning

To prevent scratching the lens when cleaning, use a mild, soapy solution to clean. Wipe lightly with a soft cloth.




Note:

This tachometer operates on most early model ignitions, factory electronic and high performance electronic racing ignitions.

Mounting

- 1. Mount tachometer in a 33/8" dia. hole. Be careful not to cut the hole too large.
- 2. Cut a 3/8" dia. hole in the firewall for the tachometer wires. Place a rubber grommet in the hole and route the wires through the grommet to the engine compartment.
- 3. Connect the tachometer wires as shown in the wiring sections.
- 4. Secure the tachometer to the dashboard using the provided bracket and hardware.

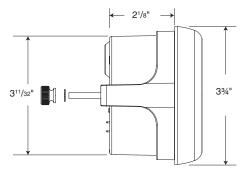

Wiring

