

INSTALLATION INSTRUCTIONS

SHORT SWEEP ELECTRIC GAUGES

2650-1079-00



CAUTION FOR ALL GAUGE INSTALLATION (AMMETERS EXCLUDED)

As a safety precaution, the +12V wire attached to the positive I (+) terminal of the gauge should be fused before connecting to the positive (+) output side of the ignition switch. We recommend using a 3 Amp, automotive type fuse inline between the power supply source and the I (+) terminal on the gauge.

NOTE: Some late model vehicles use electronic sensors in their pressure and temperature senders for engine control functions. With pressure gauges it is beneficial to add a T-fitting to install your new gauge and to keep the warning light operational. This allows you to monitor the pressure and still have a warning light to indicate emergency conditions.


NOTE: Disconnect negative (-) battery cable before installation.

CAUTION: Do not touch ignition wire to the sender (S) terminal on back of gauge or the sender may be damaged.


Mounting

These gauges can be mounted in-dash or in Auto Meter mounting solutions (panels, cups, pods, etc.). 2 1/16" diameter gauges mount in 2 1/8" hole, 2 3/8" diameter gauges mount in 2 3/4" hole. Fasten with brackets supplied as shown. (Hookup wire is required.) To assure proper functioning of this instrument, please read instructions thoroughly before installing.

FRONT MOUNTING
(BOTTOM VIEW)

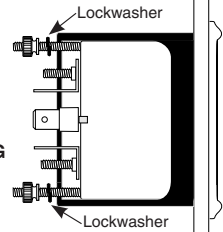

Wiring

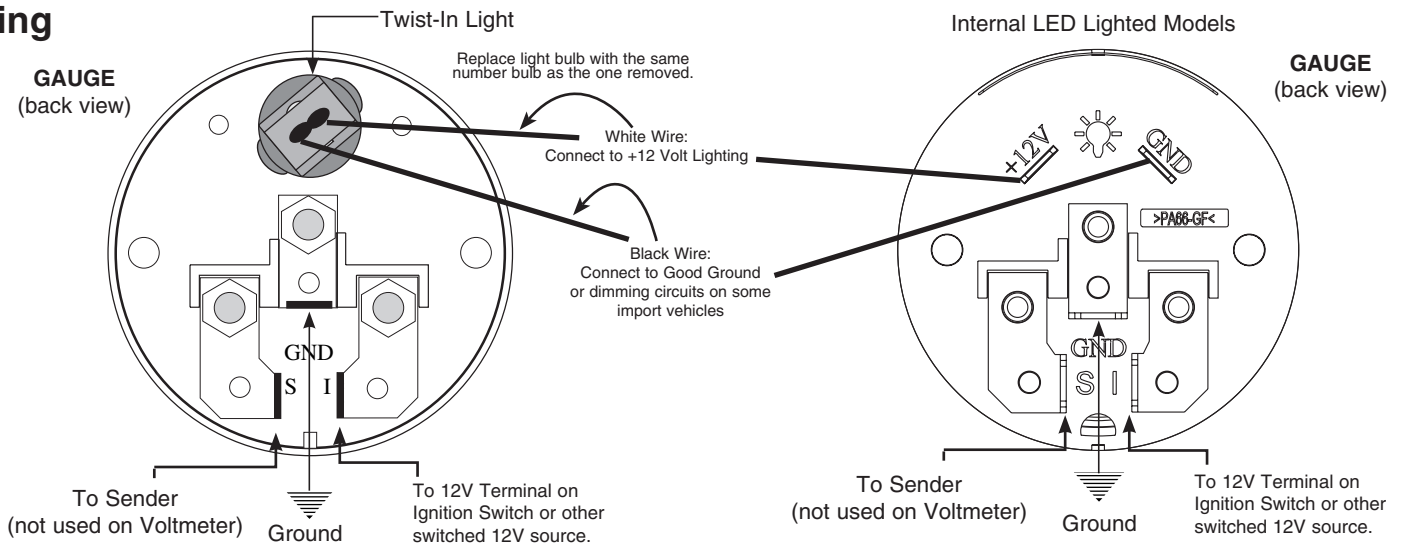


Temperature Gauges

- Install temperature sender.
 - Water Temp:** Install temperature sender (included). Purchase of additional fittings such as metric or hose adapters may be required.
 - Oil & Trans. Temp:** Hole may have to be drilled and adapter nut (included) welded or brazed in pan. Be sure there is adequate internal clearance for nut and sender. Sender should automatically be grounded when installed. If not, proper ground connections should be made. May use #2260 weld on bung on steel pans (not included).
 - Cylinder Head Temp:** Head must be drilled and tapped for 1/8" NPT hole. Sender should be grounded automatically when installed. If not, proper ground connections should be made. Be sure not to drill all the way through.
 - Diff. Temp:** Install temperature sender in 1/8" NPT sender port on cover if available. If cover does not have a port, remove cover and drill and tap a 1/8" NPT hole or, drill and weld, or braze, adapter nut (included) in cover. Proper ground connections should be made by running ground wire from bolt in cover to chassis, being sure to leave enough slack in wire for suspension travel.
- Route 18-gauge wire through firewall. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on temperature sender, and opposite end to sender (S) terminal on back of gauge.
- Route 18-gauge wire from center terminal GND (-) on back of gauge to good ground near sender.
- Connect wire from ignition switch to ignition (I) terminal on back of gauge.
- Reconnect negative (-) battery cable.

USE TEFLON SEALING COMPOUND ON PIPE THREADS

TEMPERATURE SENDER

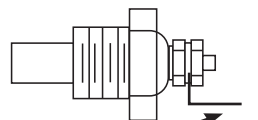


To S-Terminal on gauge
 Note: Sender grounds through threads

Pressure Gauges

- Install sender into pressure port of appropriate type. **If unit is to be installed on a high vibration application such as a full race engine or engine capable of high RPM, it is strongly recommended that the sender be remote mounted to either the fenderwell or firewall, to insulate from vibration. Failure to remote-locate pressure senders on such an application could result in gauge failure and potential damage to vehicle and/or operator injury.** Braided stainless steel lines are sold separately by Auto Meter, and can be used to accomplish this. Sender features 1/8" NPT male fitting and comes with 1/4" NPT adapter. Sender should automatically be grounded when installed. If not, or if remote relocation of sender is required, a ground connection to sender "body" may need to be made.
- Route 18-gauge wire through firewall. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on pressure sender, and opposite end to sender (S) terminal on back of gauge.
- Connect wire from center terminal GND (-) on back of gauge to good engine ground near sender.
- Connect wire from ignition switch to ignition (I) terminal on back of gauge.
- Reconnect negative (-) battery cable.

USE TEFLON SEALING COMPOUND ON PIPE THREADS

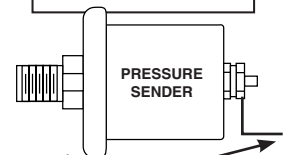

Note: Sender grounds through threads
 To S-Terminal on gauge

Ammeter

Read **before** installing: **Must be installed by experienced technician.**

WARNING

Have your maximum alternator output tested. Choice of improper ammeter rating and/or wire size, and any loose connections can cause dangerous overheating, which could lead to a fire in the vehicle. Ammeter and wire should have a capacity of at least 10 amps more than your vehicle's maximum alternator output.

1. 10-gage wire or larger must be used.
2. **IMPORTANT:** Verify that base nuts on both meter terminals are tight. Tighten base nuts prior to installing terminal lugs and wires. Connect ammeter as shown.


CAUTION:

DO NOT CONNECT THE AMMETER ACROSS THE BATTERY.

3. **IMPORTANT:** Terminal lugs must be BOTH crimped and soldered to wire; star lockwashers must be used on both sides of terminal lugs.
4. Tighten terminal nuts to compress star lockwashers into terminal lugs.
5. Verify that **none** of the ammeter connections are to ground.
6. Reconnect negative (-) battery cable.
7. Leaving engine **off**, turn on lights. Indicator should read negative (-). If it reads positive (+), disconnect neg. battery terminal and reverse the wires on back of meter, then reconnect neg. battery terminal. **Before** starting engine, double check that all connections are tight. After starting engine, check wiring connections for hot spots. Be prepared to shut engine off **immediately** if hot spots are detected.

Wiring

Example wiring of a typical Ammeter installation. Consult vehicle Mfr. for specific wiring details and safety considerations.

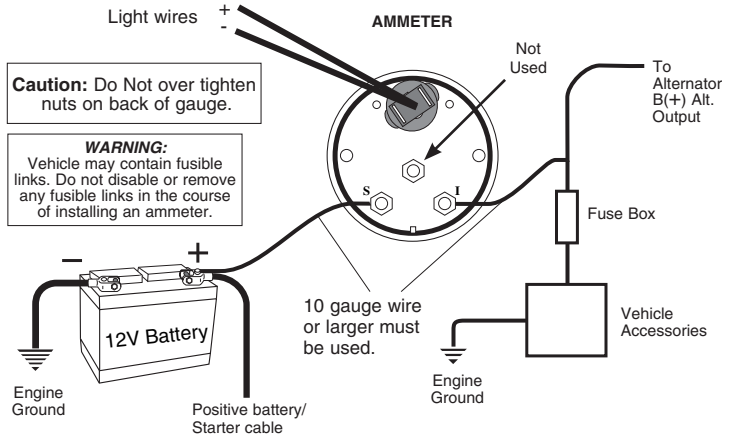


Fuel Level

Note: Before beginning installation, check to make sure stated resistance range for the gauge matches your sending unit value for proper operation. The chart below may be helpful in determining what resistance range of gauge to use.

	SENDER RESISTANCE (OHMS)	
	EMPTY	FULL
For most GM vehicles to 1997	0	90
For most Ford and Chrysler vehicles	73	8-12
Use 3262 Fuel level sender	240	33
For most GM vehicles before 1965	0	30
Most '89 and newer Fords	16	158

1. Gauge connects to fuel sender on fuel tank. Existing wires may be used, or route proper length of 18 gage, wire from fuel tank to gauge. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on fuel level sender and the opposite end to the sender (S) terminal spade on back of gauge.
2. Connect ground wire from ground post on gauge to suitable chassis ground.
3. Connect wire from ignition switch to the positive I (+) terminal on the back of gauge. See figure right.
4. Reconnect negative (-) battery cable.
5. Be sure that body or mounting flange of sender is grounded to suitable chassis ground.

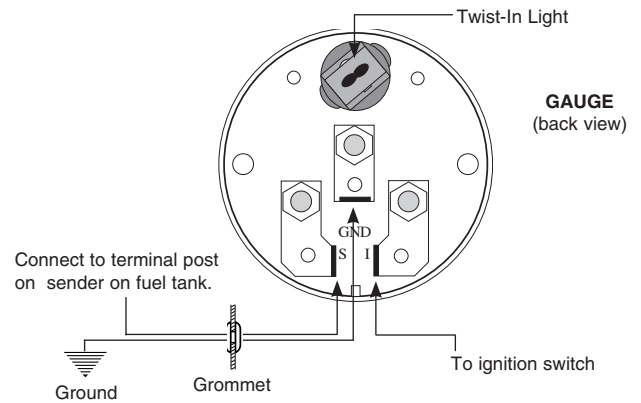

NOTE: Failure to ground sender as in step 5 may result in inoperable gauge.

Voltmeter

1. Using 18 gage wire, route one length through firewall. If a new hole is drilled in the firewall a grommet is recommended. Attach one end to the negative GND (-) spade terminal on back of gauge, and the opposite end to a good engine ground. See illustration at right.
2. Attach one length of wire to the positive I (+) terminal on back of gauge and opposite end to 12V terminal on ignition switch or other 12V switched power source.
3. Reconnect negative (-) battery cable.

