



INSTALLATION INSTRUCTIONS LED LIGHTING DIMMER



2650-1112-00 Rev. A

This dimmer will allow brightness level control of AMP products with LED Lighting such as Cobalt and C2. It can be used with various gauge, tachometer and speedometer combinations.

DIMMER INSTALLATION

The dimmer module consists of a small box with three wires and a level adjustment control. The three wires are to be connected as follows:

- Black wire: Connect this to the vehicle's electrical ground.
- White wires: Connect this to all of the white wires or positive lighting spade terminal from the gauge products installed in the vehicle.
- Violet wire: This wire can be connected in one of two options.


Option #1: If the vehicle has a standard dimmer control (a simple rheostat), connect the violet wire to the vehicles standard dimmer control.

Option #2: Connect the violet wire to a switched 12V source.

Use of option #2 will be required in vehicles where the lighting is driven or controlled, with an in-vehicle network or uses a PWM signal to control brightness. In this situation, the brightness of the gauges is set only by the use of this product.

Mount the dimmer module in such a way to allow convenient adjustments as required.

NOTE: When using this dimmer, only the dimmer white wire will be hooked to the LED lit gauge. Leaving another lighting power wire attached to the gauge at the same time will result in damage to the dimmer module.

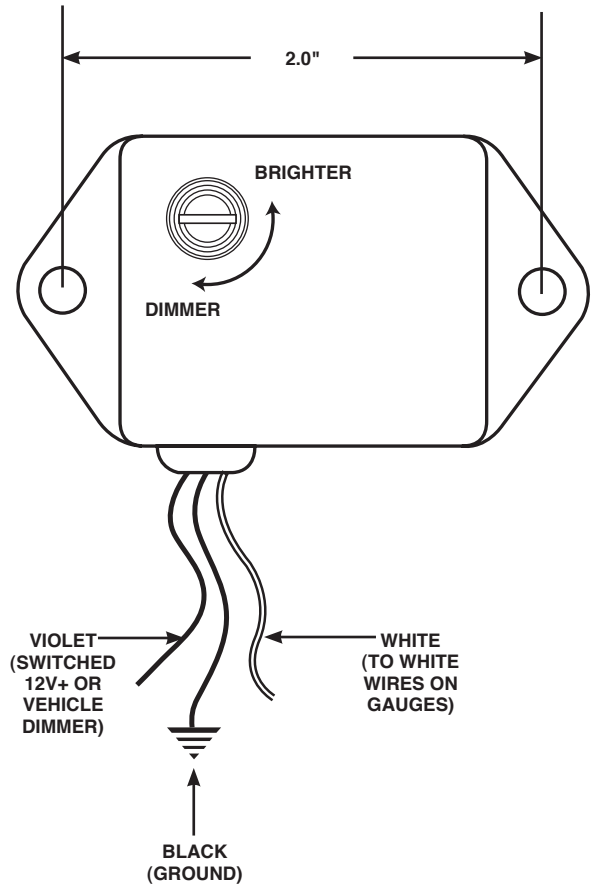

INSTALLATION INSTRUCTIONS

SHORT SWEEP ELECTRIC GAUGES

2650-1079-00 Rev. C



CAUTION FOR ALL GAUGE INSTALLATION (AMMETERS EXCLUDED)

As a safety precaution, the +12V wire attached to the positive I (+) terminal of the gauge should be fused before connecting to the positive (+) output side of the ignition switch. We recommend using a 3 Amp, automotive type fuse inline between the power supply source and the I (+) terminal on the gauge.

NOTE: Some late model vehicles use electronic sensors in their pressure and temperature senders for engine control functions. Before removing the original sender, we recommend that you contact your automotive dealer to be sure no critical functions will be disrupted. With pressure gauges it is beneficial to add a T-fitting to install your new gauge and to keep the warning light operational. This allows you to monitor the pressure and still have a warning light to indicate emergency conditions.

NOTE:: Disconnect negative (-) battery cable before installation.

CAUTION: Do not touch ignition wire to the sender (S) terminal on back of gauge or the sender may be damaged.


Mounting

These gauges can be mounted in-dash or in Auto Meter mounting solutions (panels, cups, pods, etc.). 2 1/8" diameter gauges mount in 2 1/8" hole, 2 5/8" diameter gauges mount in 2 5/8" hole. Fasten with brackets supplied as shown. (Hookup wire is required.) To assure proper functioning of this instrument, please read instructions thoroughly before installing.


Metric Adapters

If this product is to be installed on a vehicle requiring metric fittings, please contact your local Auto Meter dealer to purchase metric adapters. A complete listing of the fittings available can be found in our catalog or online at <http://www.autometer.com>

FRONT MOUNTING
(BOTTOM VIEW)

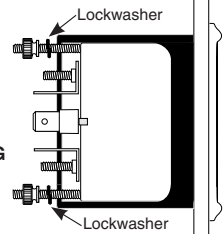

Wiring

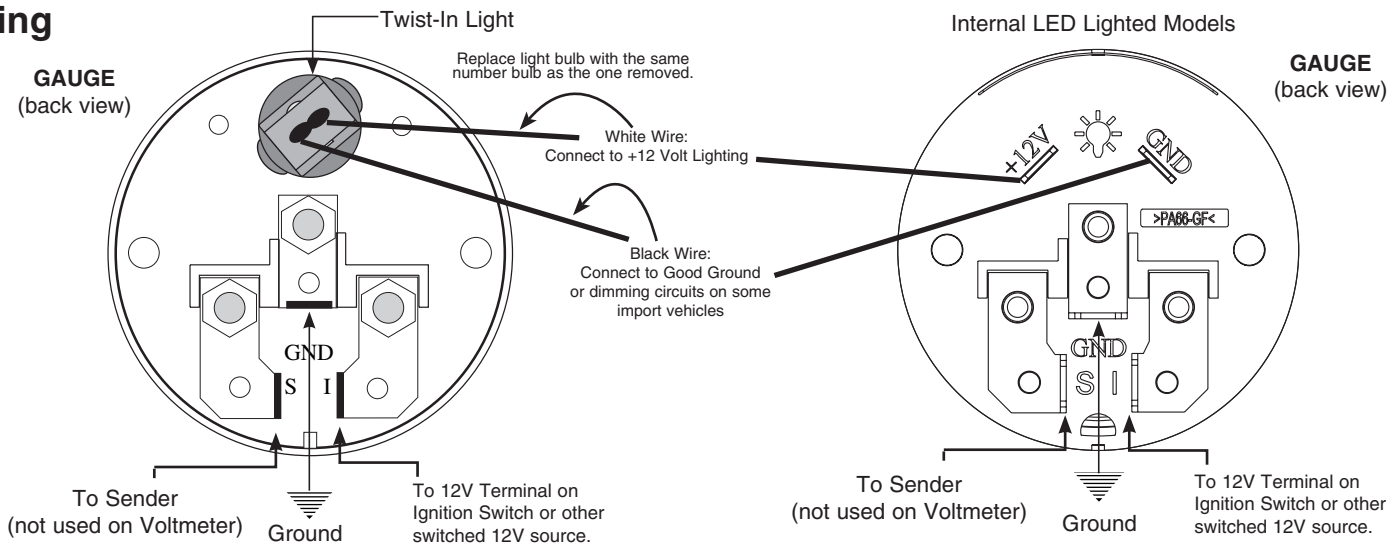


Temperature Gauges

- Install temperature sender.
 - Water Temp:** Install temperature sender (included). Purchase of additional fittings such as metric or hose adapters may be required.
 - Oil & Trans. Temp:** Hole may have to be drilled and adapter nut (included) welded or brazed in pan. Be sure there is adequate internal clearance for nut and sender. Sender should automatically be grounded when installed. If not, proper ground connections should be made. May use #2260 weld on bung on steel pans (not included).
 - Cylinder Head Temp:** Head must be drilled and tapped for 1/8" NPT hole. Sender should be grounded automatically when installed. If not, proper ground connections should be made. Be sure not to drill all the way through.
 - Diff. Temp:** Install temperature sender in 1/8" NPT sender port on cover if available. If cover does not have a port, remove cover and drill and tap a 1/8" NPT hole or, drill and weld, or braze, adapter nut (included) in cover. Proper ground connections should be made by running ground wire from bolt in cover to chassis, being sure to leave enough slack in wire for suspension travel.
- Route 18-gage wire through firewall. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on temperature sender, and opposite end to sender (S) terminal on back of gauge.
- Route 18-gage wire from center terminal GND (-) on back of gauge to good ground near sender.
- Connect wire from ignition switch to ignition (I) terminal on back of gauge.
- Reconnect negative (-) battery cable.

USE TEFLON SEALING COMPOUND ON PIPE THREADS

TEMPERATURE SENDER

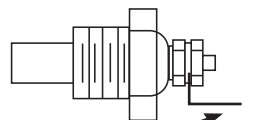


To S-Terminal on gauge
Note: Sender grounds through threads

Pressure Gauges

- Install sender into pressure port of appropriate type. **If unit is to be installed on a high vibration application such as a full race engine or engine capable of high RPM, it is strongly recommended that the sender be remote mounted to either the fenderwell or firewall, to insulate from vibration. Failure to remote-locate pressure senders on such an application could result in gauge failure and potential damage to vehicle and/or operator injury.** Braided stainless steel lines are sold separately by Auto Meter, and can be used to accomplish this. Sender features 1/8" NPT male fitting and comes with 1/4" NPT adapter. Sender should automatically be grounded when installed. If not, or if remote relocation of sender is required, a ground connection to sender "body" may need to be made.
- Route 18-gage wire through firewall. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on pressure sender, and opposite end to sender (S) terminal on back of gauge.
- Connect wire from center terminal GND (-) on back of gauge to good engine ground near sender.
- Connect wire from ignition switch to ignition (I) terminal on back of gauge.
- Reconnect negative (-) battery cable.

USE TEFLON SEALING COMPOUND ON PIPE THREADS

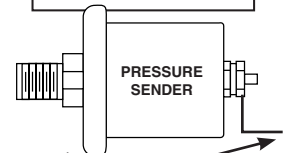

Note: Sender grounds through threads
To S-Terminal on gauge

Ammeter

Read **before** installing: **Must be installed by experienced technician.**

WARNING

Have your maximum alternator output tested. Choice of improper ammeter rating and/or wire size, and any loose connections can cause dangerous overheating, which could lead to a fire in the vehicle. Ammeter and wire should have a capacity of at least 10 amps more than your vehicle's maximum alternator output.

- 10-gage wire or larger must be used.
- IMPORTANT:** Verify that base nuts on both meter terminals are tight. Tighten base nuts prior to installing terminal lugs and wires. Connect ammeter as shown.


CAUTION:

DO NOT CONNECT THE AMMETER ACROSS THE BATTERY.

- IMPORTANT:** Terminal lugs must be BOTH crimped and soldered to wire; star lockwashers must be used on both sides of terminal lugs.
- Tighten terminal nuts to compress star lockwashers into terminal lugs.
- Verify that **none** of the ammeter connections are to ground.
- Reconnect negative (-) battery cable.
- Leaving engine **off**, turn on lights. Indicator should read negative (-). If it reads positive (+), disconnect neg. battery terminal and reverse the wires on back of meter, then reconnect neg. battery terminal. **Before** starting engine, double check that all connections are tight. After starting engine, check wiring connections for hot spots. Be prepared to shut engine off **immediately** if hot spots are detected.

Wiring

Example wiring of a typical Ammeter installation. Consult vehicle Mfr. for specific wiring details and safety considerations.

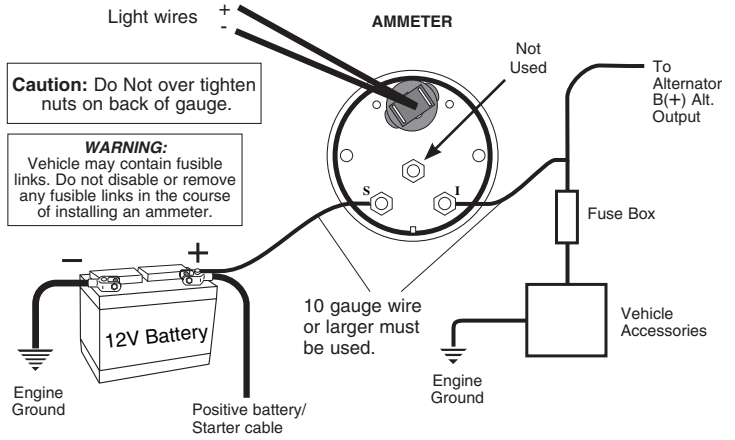


Fuel Level

Contact Auto Meter service if help is needed in determining your sender resistance.

Note: Before beginning installation, check to make sure stated resistance range for the gauge matches your sending unit value for proper operation. The chart below may be helpful in determining what resistance range of gauge to use. For further assistance please contact Tech Support at 866-248-6357.

	SENDER RESISTANCE (OHMS)	
	EMPTY	FULL
For most GM vehicles to 1997	0	90
For most Ford and Chrysler vehicles	73	8-12
Use 3262 Fuel level sender	240	33
For most GM vehicles before 1965	0	30
Most '89 and newer Fords	16	158


- Gauge connects to fuel sender on fuel tank. Existing wires may be used, or route proper length of 18 gage, wire from fuel tank to gauge. If a new hole is drilled in the firewall a grommet is recommended. Connect one end to terminal post on fuel level sender and the opposite end to the sender (S) terminal spade on back of gauge.
- Connect ground wire from ground post on gauge to suitable chassis ground.
- Connect wire from ignition switch to the positive I (+) terminal on the back of gauge. See figure right.
- Reconnect negative (-) battery cable.
- Be sure that body or mounting flange of sender is grounded to suitable chassis ground.

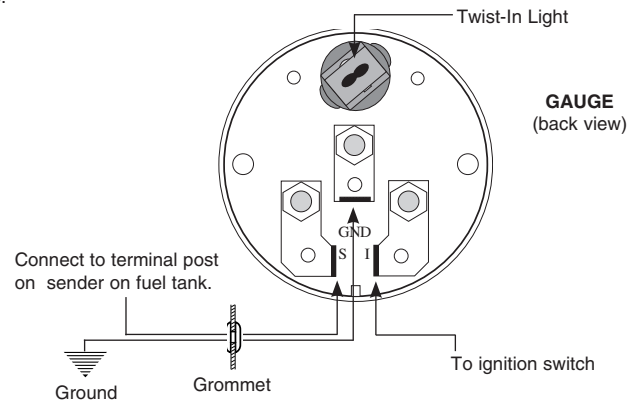

NOTE: Failure to ground sender as in step 5 may result in inoperable gauge.

Voltmeter

- Using 18 gage wire, route one length through firewall. If a new hole is drilled in the firewall a grommet is recommended. Attach one end to the negative GND (-) spade terminal on back of gauge, and the opposite end to a good engine ground. See illustration at right.
- Attach one length of wire to the positive I (+) terminal on back of gauge and opposite end to 12V terminal on ignition switch or other 12V switched power source.
- Reconnect negative (-) battery cable.

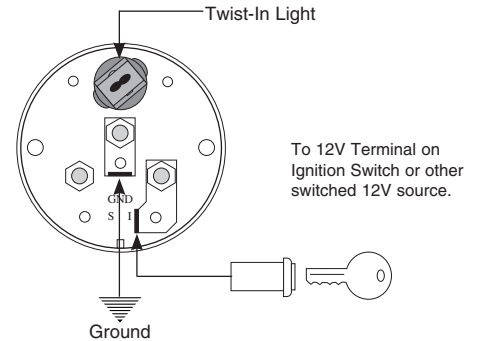



2650-1870-77

1965-66 FORD MUSTANG BILLET ALUMINUM ADAPTER PANEL

Model 7035

Included hardware:

Four 6-32 x 1" F-type self tapping screws

Four 6-32 x 1/2" F-type self tapping screws

Four 7/16" aluminum spacers

Ten 10-32 x 1" machine screws

Four 10-32 x 1/4" machine screws

Two 8-32 x 5/8" stud extenders

NOTE: This kit is designed for Scott Drake reproduction bezels. It may not fit stock or other reproduction bezels correctly.

1. Place the gauge bezel face down.
2. We recommend using the 6-32 F-type screws to pre-tap the holes in the your bezel.
3. Place the four smaller gauges onto the desired locations on the gauge bezel.
4. Push the turn signal lights into position & secure using two 10-32 x 1/4" machine screws per side.
5. Secure mounting panel to the gauge bezel using the four 6-32 x 1/2 F-type self tapping screws on the bottom & the four 6-32 x 1" self tapping screws on top. Place the four spacers in between the aluminum adapter panel & the top mounting panel.
6. Screw the 10-32 x 1" machine screws through the mounting panels to secure the aluminum adapter panel. Do not over tighten.
7. Install the speedometer through the front side & secure using the hardware provided by the gauge manufacturer. The bracket may need to be shortened. The two stud extenders can be used instead of shortening the bracket in most cases.

Learn more about gauges and dashboards we have.