INSTX5VI-2004

Chevrolet Corvette 1997-2004



X5VI-2004

1997-2004 GM accessory Interface

- Provides accessory (12-volt 10-amp)
- Retains R.A.P. (Retained Accessory Power)
- · High level speaker input
- Retains door woofers
- USB updatable

INSTALLATION INSTRUCTIONS

Wiring the XSVI-2004:

- · Connect the Yellow wire to the radio's 12-volt battery or memory wire.
- Connect the **Black** wire to the radio's ground wire.
- . Connect the **Red** wire to the ignition wire of the aftermarket radio.
- Connect the Orange/White wire to the illumination wire of the aftermarket radio.
 If the aftermarket radio has no illumination wire, tape off the orange wire.
- Connect the Blue/White wire to the amp turn on wire of the aftermarket radio.
- Connect the White wire to the left front positive speaker output of the aftermarket radio.
- Connect the White/Black wire to the left front negative speaker output of the aftermarket radio.
- Connect the Gray wire to the right front positive speaker output of the aftermarket radio
- Connect the Gray/Black wire to the right front negative speaker output of the aftermarket radio.
- · Connect the Green wire to the radio's left rear positive speaker output.
- · Connect the Green/Black wire to the radio's left rear negative speaker output.
- Connect the **Purple** wire to the radio's right rear positive speaker output.
- . Connect the Purple/Black wire to the radio's right rear negative speaker output.

INSTX5VI-2004


INSTALLATION INSTRUCTIONS

Initializing the XSVI-2004:

When all the connections are completed plug the XSVI-2004 into the vehicle. Turn the ignition key to the "On" position for thirty seconds, then turn the key off.

Adjusting the differential line convertor:

Turn the potentiometers clockwise to increase the audio level of the door woofers and turn the potentiometers counter clockwise to decrease the audio level of the door woofers. (Figure A)

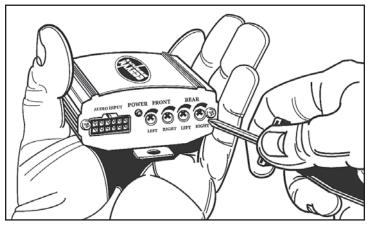

(Figure A)