



**Do not leave
hose barb /
hose assembly
attached to
drain valve
during engine
operation.
Only attach it
to drain water
from the filter.**

413917