



Innovation Made Better™

Instruction Manual Models 800 Series Retractable Reel

Multiple Patents Pending



Electrical Rating - All models use 125 Volts 60 Hz

CAUTION - TO REDUCE THE RISK OF ELECTRIC SHOCK AND FIRE - PULL PLUG WHEN SERVICING, OR WHEN RE-LAMPING - USE ONLY 13 WATT OR SMALLER BULB

CAUTION

DO NOT use in explosive atmospheres, near flammable liquids, or where explosion proof lamps are required.

DO NOT use in the proximity of vehicles or equipment when there is a risk of flammable liquids coming into contact with the hand lamp.

DO NOT immerse in water.

DO NOT use in areas where water can accumulate or in rain or mist.

CAUTION: Risk of Electric Shock – For Light Duty Dry Location Use Only.

GENERAL USE CORD REEL ONLY. NOT FOR HARD USE. FOR INDOOR DRY LOCATION USE ONLY FOR LIGHT DUTY RESIDENTIAL USE ONLY

WARNING: NOT FOR USE ABOVE HAZARDOUS LOCATIONS

CAUTION: DO NOT USE IN HAZARDOUS LOCATIONS AS REQUIRED BY THE CANADIAN ELECTRICAL CODE, PART I

IMPORTANT SAFETY INSTRUCTIONS

This product has a 3-prong polarized plug on the power cord. Do not attempt to bypass this safety feature by removing the round plug and defeat his safety feature. This plug will fit into a grounded outlet only one way. If the plug does not fit fully into the outlet, contact a qualified electrician. Never use with a two wire extension cord.

IMPORTANT NOTICE: THIS PRODUCT IS ETL LISTED

OPERATION

To operate, plug into a 120 Volt 60 HZ grounded outlet. Notice the plug and insert properly.

Pull out the desired length of cord. Notice a clicking noise when pulling the cord. The cord will stay at the desired length during the clicking and rewind after a pull past the clicking noise. Extended length when retracted can be achieved by sliding the rubber stop on the cord to the desired position.

CAUTION: PULL OUT CORD TO FULL LENGTH WHEN USING RECEPTACLE

CAUTION: DO NOT ALLOW THE CORD TO RETRACT BY ITSELF AS DAMAGE OR INJURY MAY OCCUR FROM EXCESSIVE REWIND SPEED

FEATURES


- The cord is 30ft long; with polarized 3 prong plug.
- Mounts on ceiling or wall
- Adjustable cord stop.

MOUNTING

CAUTION: DRYWALL WILL NOT HOLD THE WEIGHT OF THE REEL ASSEMBLY
CAUTION: READ AND UNDERSTAND MOUNTING INSTRUCTIONS BEFORE ATTEMPTING INSTALLATION AND USE OF THIS PRODUCT

Ceiling or Wall Installation

1. Select a location within 18 inches of an electrical outlet. The outlet for a garage door opener is desirable.
2. Drywall will not hold the weight of the reel assembly, so locate a ceiling joist or wall stud and using the mounting bracket as a template, mark the holes so they are centered on the ceiling joist or stud.
3. Attach the mounting bracket to the stud using the 2 wood screws provided.
4. Align the holes on the side of the reel with the holes in the side of the mounting bracket and insert the pin.
5. Place the retaining ring on the pin and twist until the entire ring is through the hole in the pin. **DO NOT operate this reel without the retaining ring in place on the pin.**

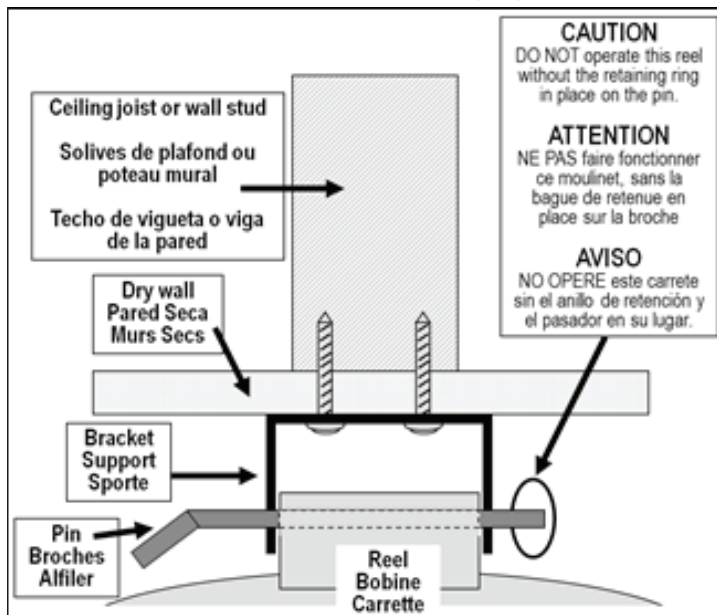

SAFETY / CARE

- Caution: do not allow the cord to retract by itself as damage or injury may occur from excessive rewind speed.
- Adjust the cord stop to hold the receptacle at the desired length when the cord is retracted.
- Before cleaning the reel always unplug from the power source.
- Clean the outside of the cord reel only. Use a soft cloth with mild detergent. Do not use petroleum based to clean the cord reel. Never immerse the cord reel or receptacles or work lights in water. Dry thoroughly before attempting to reattach to power source.