

1996-2004 4.6L 2-V Mustang Throttle Intake

Part# 1780

INSTALLATION INSTRUCTIONS

Included In This Kit-

Throttle Intal	ke (4) mounting screws	s (2) PCV fittings	EGR& IAC gask	rets	
(2) TPS screw	ws TPS bushing	(2) throttle cable b	pracket mounting	bolts.	
<i>Tools Requ</i> ¼" Drive Rat		4 &6mm Allen wren	iches		
8mm & 10mi	n Deep Sockets	Phillips Screwdrive	er		A
Step 1	Disconnect negative (–) battery terminal and remove the intake air hose to the throttle body.				
Step 2	Remove the 2 EGR tube bolts on the driver's side of the plenum.				
Step 3	Remove the throttle cable bracket bolts and disconnect the Throttle and cruise control cables from the throttle body.				
Step 4	Disconnect the electrical and vacuum connections that attach to the plenum and throttle body.				
Step 5	Remove the 5 mounting bolts that attach the plenum to the manifold and remove the throttle body/plenum assembly from the vehicle.				
Step 6	Determine the PCV fitting your application requires and install into the plenum.				
Note;	Install the PCV fitting before installing the IAC valve. '96-'01 = small PCV fitting. '02-'04 =large PCV fitting.				
Step 7	Install the IAC valve using the supplied gasket and original bolts.				
Step 8	Place TPS bushing over the TPS shaft and install TPS using the supplied screws.				
Step 9	Inspect the plenum to lower manifold gasket, be sure to wipe any debris from the mating surfaces then install the throttle body/plenum assembly onto the intake manifold using the supplied bolts.				
Note; Step 10	<i>For this installation you will only use 4 of the 5 mounting holes on the intake manifold.</i> Re-establish the electrical and vacuum connections.				
Step 11	Attach the throttle and cruise control cables to the Throttle Intake and attach the bracket to the Throttle Intake using the supplied bolts.				
Step 12	Reconnect the EGR tube using the supplied gasket and original bolts.				

Step 13 Reconnect the intake air hose and the negative battery terminal.