

INSTALLATION INSTRUCTIONS

TOOLS REQUIRED- 8, 10, 13mm sockets, ratchet, 5mm allen wrench.

You will be reusing the stock throttle body gasket.

- **STEP 1** Disconnect negative battery cable.
- **STEP 2** Remove strut tower brace.
- **STEP 3** Remove engine cover by pulling up on it to release it's mounting pins from the grommets on the intake manifold. *Fig. 1*
- **STEP 4** Disconnect the smaller plastic breather tube from the air inlet tube. You can leave the sound tube connected. *Fig.* **2**
- **STEP 5** Loosen the clamps on the air inlet tube at the air box and the throttle body.
- **STEP 6** Remove air inlet tube and set aside. *Fig.* **3**
- **STEP 7** Remove the four mounting bolts from the stock throttle body, as you remove the throttle body, flip it to unplug the motor plug on the bottom. *Fig. 4*
- **STEP 8** Wipe off stock rubber throttle body gasket to remove any oil or debris. You will be reusing this gasket. *Fig. 5*
- **STEP 9** Connect motor plug to BBK throttle body and install onto intake manifold. Use supplied bolts to secure BBK throttle body.
- STEP 10 Reinstall the air inlet tube and reconnect breather tube. Tighten clamps. Fig. 6
- **STEP 11** Reinstall the engine cover's pins onto the grommets and push down to secure.
- **STEP 12** Reinstall the strut tower brace and tighten the nuts.
- **STEP 13** Reconnect negative battery cable.



Fig. 1 Removing engine cover to access throttle body.



Fig. 2 Remove smaller breather tube. Larger sound tube can stay connected.



Fig. 3 Set air inlet tube aside, out of the way.



Fig. 4 Disconnect throttle body motor control plug. Slide red tab out, then push on black tab.



Fig. 5 Reuse the stock O-ring style gasket. Just wipe off oil and debris with a rag.



Fig. 6 BBK Throttle Body shown installed. Stock air inlet tube will fit the 85mm opening.