 



Vehicle Application:

• B]ggUb H]HUb

6.5' bed 04-Current

Part Number: 19170



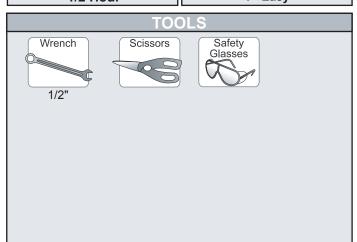


Wash vehicle to ensure that no dirt or abrasive materials are caught between the truck's finish and the Tonneau Rail Frame.

Check and secure all clamps to bed frame as indicated in the installation instructions before operating your vehicle.

Tonneau cover clamps must be securely attached prior to vehicle operation.

 Secure retaining straps when cover is in open position.



Installation Tips


Before you begin installing this assembly, read all instructions thoroughly.

For a smooth fit:

For ease in installation, the product should be installed at temperatures above 72° F. Below this temperature, the fabric may contract an inch or more, making it difficult to fit to the vehicle. It is normal for fabric to contract and wrinkle when stored in the shipping carton. Within a few days after the installation, the fabric will relax and the wrinkles will disappear.

WARNING The buckle of each retaining strap and both clamps must be fastened securely to avoid damage to personal property or possible personal injury.


If the vehicle has an Over-the-Rail Bedliner, use a certified installer to perform the initial installation. Modifications to the Bedliner may be required.

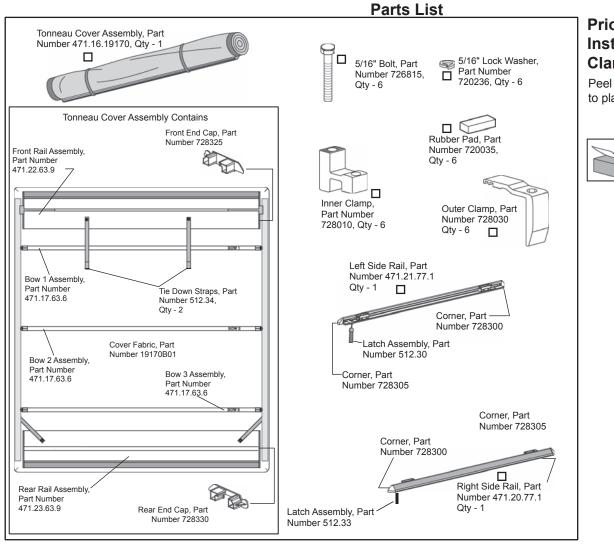

Prior to installing tonneau: Install Rubber Pads on to Outer Clamps

Peel the backing off Rubber Pads and press firmly to place on bottom of Outer Clamps.




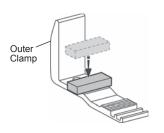





Assemble Clamps

Use the 5/16" Bolts and 5/16" Lock Washers to assemble the Large and Small Outer Clamps to the Inner Clamps. Create six (6) Clamp Assemblies.

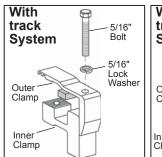


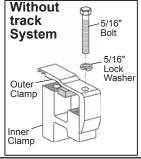

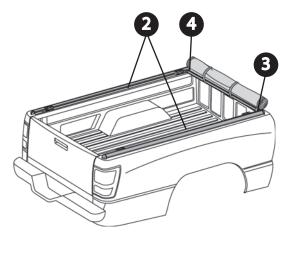

Secure Tonneau Cover Assembly to Passenger Side Rail

Place the Tonneau Cover Assembly into the front pivot on the Passenger Side Rail. Engage the cover assembly latch into the slot on the Side Rail. Make sure that the cover assembly is flush against the Side Rail.

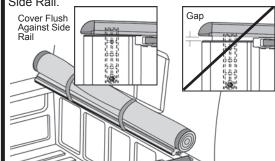


2

Place Side Rails on Bed

Locate the 2 side rails. Remove the protective tape on the bottom of each rail and place the rail on the bed on each side of the vehicle.


Once the rails are on the bed, align the front edge of each Side Rail, with the inside edge of the front bulkhead.

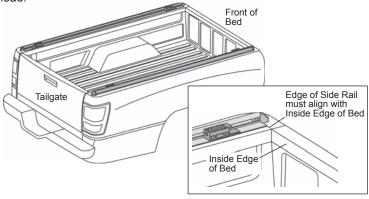

4

Secure Driver Side Rail to Tonneau Cover Assembly

Place the Driver's Side Rail into the Tonneau Cover Assembly. Make sure the cover assembly latch is fully engaged into the slot on the Side Rail and that the cover assembly is flush against the Side Rail.

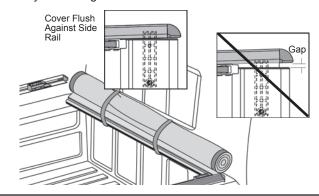


Place Clamps

Place a Large Outer Clamp Assembly on the Side Rail 6" behind the front pivot mount. Place the a Small Outer Clamp Assembly 6" in front of the rear pivot mount. Locate the center of the Side Rail and place the remaining Large Outer Clamp Assembly either 6" in front of this point or 6" behind it as needed for your vehicle.

Do Not Tighten the Clamps at this time. Repeat on both sides of the vehicle.

Clamp positions may vary depending on any bed accessories you may have.

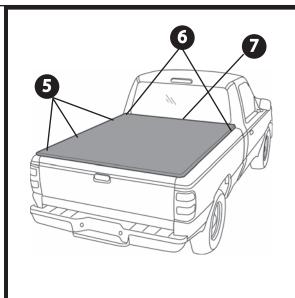




6 Un-do Straps

Un-do the Tie Down Straps.



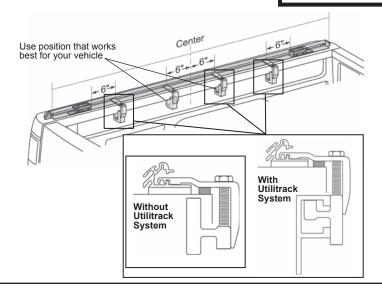




Center Tonneau Frame


With the Tonneau Cover Assembly latched on both sides, push both Side Rails in so they are flush with the Front Rail. Center the front of the Frame from side to side on the vehicle.


For proper function, it is best to leave a 1/8" gap between the Side Rail and the Front Rail.

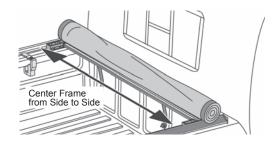



Tighten the front Clamp on each side until the Lock Washer is compressed.

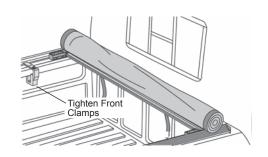


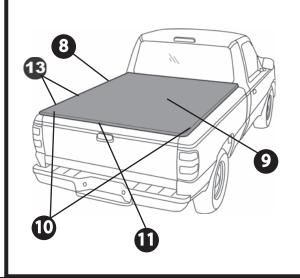

Center Rear of Frame


Push the Side Rails flush against the Rear Rail and center the rear of the Frame from side to side on the vehicle.

For proper function, it is best to leave a 1/8" gap between the Side Rail and the

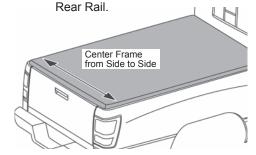


Roll Out Cover

Roll out the cover. Make sure that each bow falls between the Side Rails.

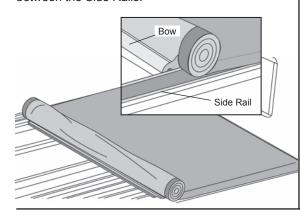

Secure Rear Rail To Rear Pivot Mounts


Rotate the Rear Rail into the rear Pivot Mounts on both sides. It will only latch on the driver's side.

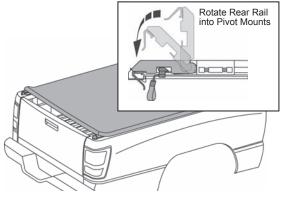

12 Secure Remaining Clamps

Once the Frame is centered reach between the cover and the Side Rail to access the center and rear clamps. Tighten the 5/16" Bolt in the Clamp until the Lock Washer is compressed, then add 1 to 1-1/2 additional turns to reach optimum pressure. Repeat on both sides of the vehicle.

Do not remove the cover until all clamps are tight.

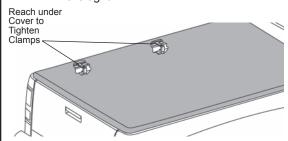


19170 pg. 5 Rev. A 1114




13 Secure Sides of Cover

Fasten the loop strip sewn to the driver's side of the Tonneau Cover to the hook on the Side Rail. Pull the fabric tight across and secure the passenger side.


Make sure to keep the fabric tight across the bed to ensure a proper fit.

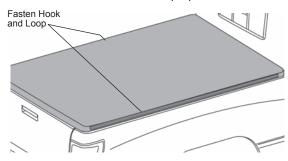

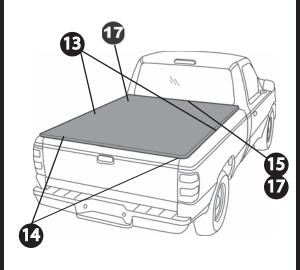


To Remove Cover – Loosen Side Rail

Loosen the front and middle clamps on the Driver's Side Rail. Pull outward on the rail until the cover disengages from the Side Rail.

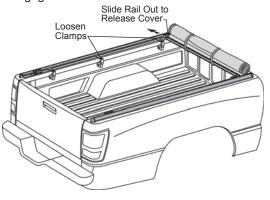


To Remove Cover -**Release Latches**

Open the tailgate and pull both the drivers side latch and the passenger side latch to rear of vehicle.

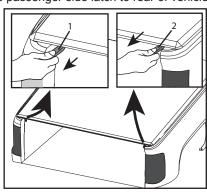

To Remove Cover – Roll Cover


Tightly roll the Cover toward the front and attach strap to the 2 front loop attachments.

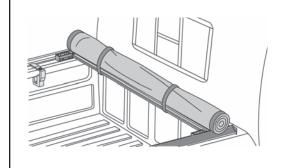

Remove Cover

Remove the Cover Assembly from the vehicle.

Once the Cover is removed, retighten the clamps on the Side Rail.

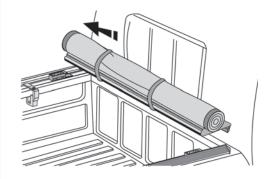



Special Instructions – Bed Liners

If your vehicle is equipped with a Bed Liner that comes up over the front bulkhead, you will need to trim the seal on the Tonneau Cover Assembly. Mark the seal at each end of the of the Bed Liner and use scissors to trim the bottom, "eyelash", part of the seal at the mark.

NOTE

Only trim the bottom, "eyelash", part of the seal.

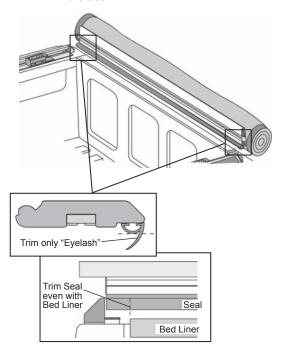

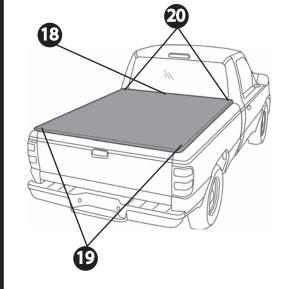





Use a 1/4" Allen Wrench to adjust the tension on the cover.

NOTE

Make sure the tension is the same on both sides of the vehicle.

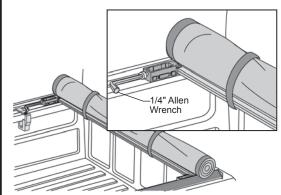

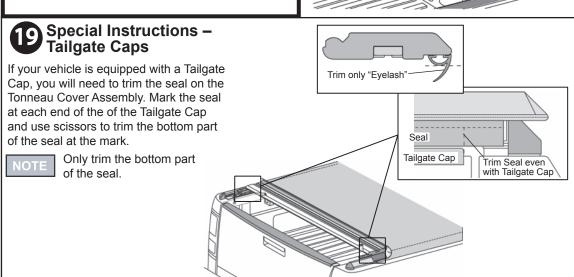

Care and Maintenance of your Bestop Product

Your Bestop product is made of the finest materials available. To keep it looking new and for the maximum possible wear, it will need periodic cleaning and maintenance.

Washing: The fabric should be washed often using soap, warm water and a soft bristle brush. Rinse with clear water to remove all traces of soap or use Bestop-recommended Bestop Cleaner and Bestop Protectant. Bestop Cleaner and Bestop Protectant are specially formulated to provide a total cleaning and protection system. Bestop Cleaner will not harm vehicle finish, is biodegradable and environmentally friendly. Bestop Protectant protects against UV-fading, cracking and hardening.

Water: Seeping through at the seams may be stopped by applying 3-M Scotchgard® on the inside of the seams. Rips in the fabric may be repaired with Bondex® iron on patches. Iron the patches to the Inside of the top, carefully following the Bondex® instructions.

Snaps: Keep snaps cleaned and lubricated to help prevent snaps from sticking to the studs. If a snap does become stuck to a stud, use a screwdriver and GENTLY pry apart to prevent permanent damage to the snap or the fabric.

