



Bestop

Seat Cover Installation Instructions

For: Wrangler '92 - '94

Part Number: 29224

DO NOT INSTALL THIS PRODUCT ON ANY VEHICLE OTHER THAN THOSE LISTED ABOVE.

Parts List

Seat Cover - Right, Qty - 1
Seat Cover - Left, Qty - 1

Seat Covers are not waterproof.

Warning:

This product is designed to enhance the appearance of the vehicle. Do not rely in any way on the components of this product to contain occupants within the vehicle, or to protect against injury or death in the event of an accident. This product will not protect the occupants from falling objects. Never operate vehicle in excess of manufacturer's specifications.

Wear seat belts at all times.

Read and follow, precisely, all installation instructions provided when installing this product. Failure to do so may result in a poor fit and could place occupants of the vehicle in a potentially dangerous situation.

Warning: *DO NOT* remove the seats from the vehicle to install this product.

Step One

Orient the Seat Cover on the seat, the Driver's side cover will have an extra opening for the seat release button. Slip the opening in the cover over the seat back and pull the cover down to the seat bottom. Make sure that the security cord on the bottom of the cover goes around and under the outside of the plastic cover of the seat recliner mechanism and tuck the fabric under the mechanism cover.

Step Two

Locate the flap sewn to the inside of the cover at the corner between the seat back and the seat bottom. Tuck the flap between the seat back and the seat bottom.


Pull Cover over
back of seat



Tuck Flap between
Seat Back and Bottom


Step Three

Slide the cover over the seat bottom with the opening in the side of the cover over the seat back release lever. Release the seat back and tilt the seat forward. Unhook the security cord and thread it through the end of the flap. Hook the ends of the cord together. If necessary for a smooth fit, tighten the cord by tying a knot and tuck in any loose fabric.

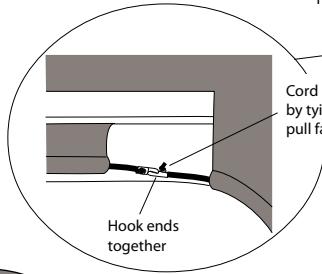

Unhook Security Cord and Thread through Flap - Reattach

Cord length may be adjusted by tying additional knots to pull fabric up tighter

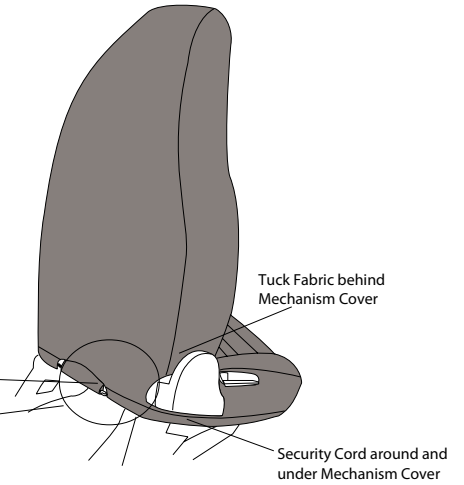

To Fasten Hooks

Slip the two hooks together at right angles to each other.

Turn one hook until they hook to each other.

To secure the hooks, pull them against each other until they click into position.

To Release Hooks: *Turn one hook until it is at right angles to the other and pull apart.*



Step Four

Locate the hook and loop strips sewn to the cover on side of the seat toward the center of the vehicle. Fasten the strips to each other.