



TOE ROD INSTALLATION INSTRUCTIONS

Part # TR007

Recommended tools:

- Wrenches – 18mm, 19mm, 1-1/8", 1-1/4"
- Hydraulic jack and jack stands

Installation:

1. Lift vehicle and safely support on jack stands. Remove both rear wheels.
2. Using two 18mm wrenches, remove the inner bolt on the factory toe rod. Remove the outer bolt with also with an 18mm wrench or socket then remove the toe rod. (**IMAGE 1**)
3. Adjust the BMR toe rod to the approximate length of the factory toe rod as shown in **IMAGE 2**.
4. Install the BMR toe rod using the supplied hardware on the inside mount. The square "lockout" washers install on both sides of the inner mount as shown in **IMAGE 3**.
5. Tighten the inner bolt to 83 ft/lbs. using two 19mm wrenches or a wrench and socket.
6. Tighten the outer bolt to 59 ft/lbs. using an 18mm socket or wrench.
7. Re-install the wheels/tires and lower the vehicle.
8. Adjust toe to the desired setting by turning the BMR toe rod left or right. Once set, tighten the jam nuts using a 1-1/8" and 1-1/4" wrench.



IMAGE 1



IMAGE 2

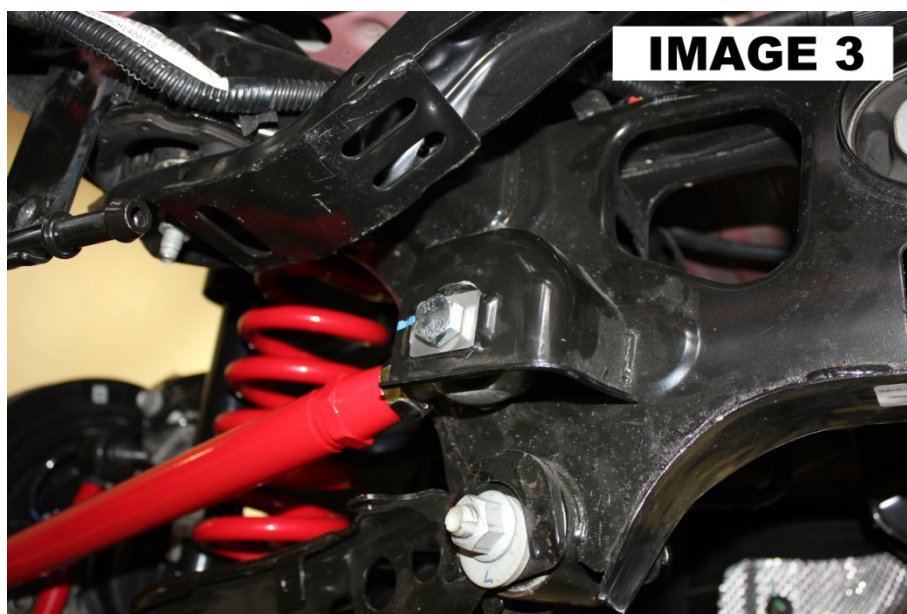


IMAGE 3