
VTL275LTJ • VTL375LTJ • VTL405LTJ • VTL425LTJ

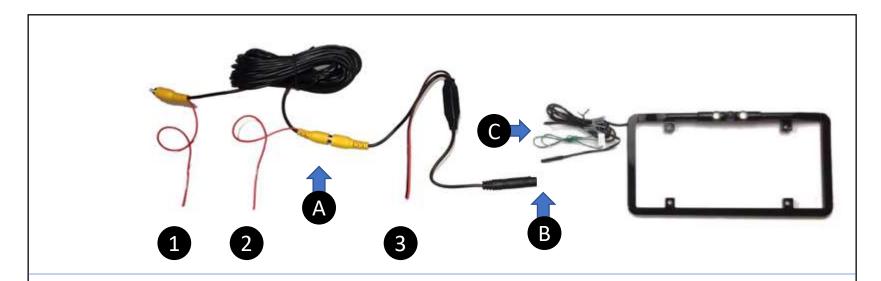

Trigger wires

- 1 To monitor trigger signals monitor to switch to the backup camera
- 2 To reverse backup light positive
- **3** Camera Power

Red to reverse backup light positive Black to ground / chassis

Harness / Extension Connection

- A Video connector
- B Power harness connector

C Control Loops

White loop: reverse image (default)

cut = normal image

Blue loop: parking guidelines on (default)

cut = parking guidelines off

Green wire: Connect to the reverse backup light

positive.

Will turn on when the gear is in

reverse.