

XD SLIDER PREP INSTRUCTIONS

- 1. Every 3 to 4 weeks remove ½ male rod end from bottom of threaded tube and flush XD Body with clean solvent.
- 2. Pull the shaft out, put clean oil on the shaft, work the shaft in and out to lube the seal.
- 3. Add 3 tablespoons of 30w Mobil 1 Synthetic motor oil, (DO NOT USE GREASE, WD-40, OR ANTISEAZE IT WILL CAUSE BEARING FAILURE.) Install male rod end be sure to use Teflon thread tape on rod end to prevent leaking.

REPLACMENT PART LIST

#7540-5 5/8" SHAFT*

#7540-6 5/8" SHAFT 2" LONGER*

#7540-9 Wedge Adjuster Nut

#7508 BEARING*

#7540-12 DOUBLE LIP SEAL*

#7540-13 AN WIPER*

#7540-11 2" ext. SNAP RING

#7540-7 XD PLUNGER

#7540-14 BEARING FOR XD PLUNGER*

#7540-15 REBUILD KIT

#7540-16 REBUILD KIT 2" LONGER

*COMES IN REBUILD KIT

SPRING CUPS #7540-10 SLOTTED #7503 TOP PLATE

LYNCH CLIP #7516

WRENCH # 7510

BSB MFG WILL REBUILD/REPAIR ALL XD SLIDERS FOR THE COST OF REPLACEMENT PARTS.