

Installation Instructions


3020626 Chute Crank Kit

1. Install the crank mount onto the side of the spreader (using the included 3/8-16 HHCS, washers and lock nuts). See Figure 1

See Figure 1

2. Install the pulley onto the mount using the included u-bolt and nuts. See Figure 1

Fig. 1

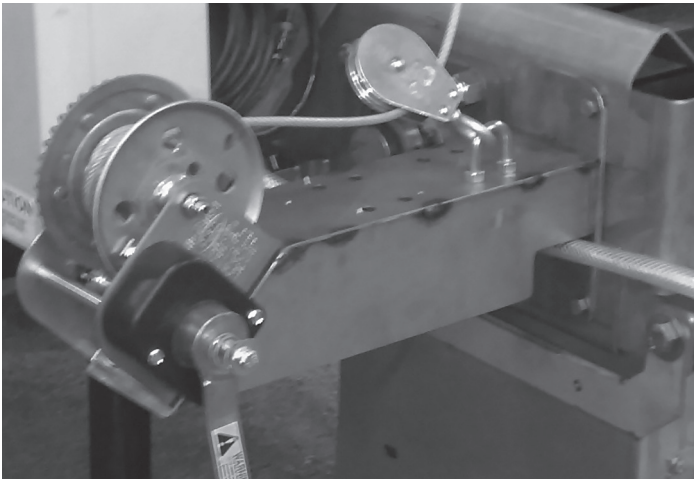

3. Install the pulley mount at the jack (replace the existing hardware using the included 1/4-20 x 1-1/2 Hex Head Cap Screws). See Figure 2

4. Install the pulley onto the mount using a quick link connector. See Figure 2

Fig. 2



5. Determine where on the chute to attach the free end of the wire rope with the included snap hook. The method shown welded the included wire tie to the chute. An alternate method would be to drill a hole and attach the snap hook directly or you could use a second quick link connector or eyebolt (neither included) for the snap hook attachment. See Figure 3

Fig. 3



6. Install the wire rope to the crank then feed through pulleys and fasten using the included thimble and wire rope clips. (**Caution: Be sure to install the wire rope clips correctly. The U-bolt half should go over the wrapped short leg of the cable while the cradle holds the active length**) See Figure 4

Fig. 4

