
## MINI STROBE Manual



## 8891120, 8891121, 8891130, 8891131, 8891132 Mini Strobes

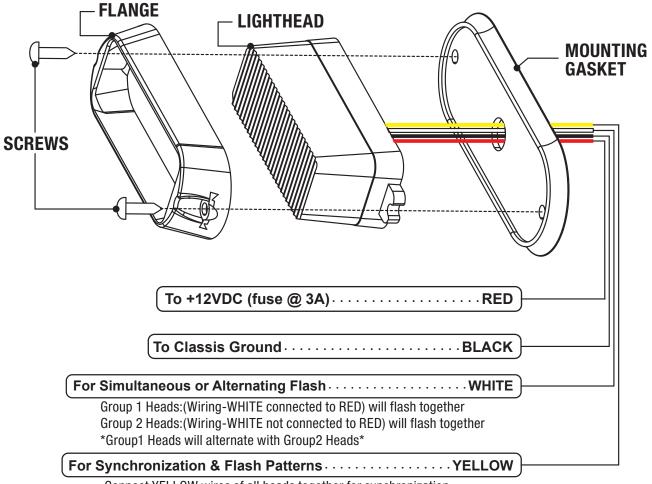

Connect YELLOW wires of all heads together for synchronization \*All heads must be set at the same pattern attention: Lightheads will not sync on the random pattern (pattern 1)

# FLASH PATTERN	# FLASH PATTERN	# FLASH PATTERN
1 Random (default)	8 Single-Quad (split)	14 Mega (all)
2 Single (split)	9 Single H/L (split)	15 Ultra (all)
3 Double (split)	10 Single (all)	16 Single-Quad (all)
4 Quad (split)	11 Double(all)	17 Single H/L (all)
5 Quint (split)	12 Quad (all)	18 Steady 2 (California)
6 Mega (split)	13 Quint (all)	19 Steady 4 (all)
7 Ultra (split)		

To select flash pattern, apply +12 V (RED wire) to YELLOW wire for less than 1 second for next flash pattern. To set pattern back to default (pattern 1) hold for more than 5 seconds.

Note: This unit is not factory set at pattern 1