

Installation Instructions

8891800 Series LED Strobe Lights

(8891800, 8891801, 8891802, 8891803, 8891804)

WARNING

Do not look directly into LEDs while in operation; this may cause momentary blindness and/or eye damage.



FP#	Flash Patterns
0	Random
1	Single (split)
2	Double (split)
3	Quad (split)
4	Quint (split)
5	Mega (split)
6	Ultra (split)
7	Single-Quad (split)
8	Single H/L (split)
9	Single (all)

FP#	Flash Patterns
10	Double (all)
11	Quad (all)
12	Quint (all)
13	Mega (all)
14	Ultra (all)
15	Single-Quad (all)
16	Single H/L (all)
17	Steady (ca)
18	Steady 4 (all)

Note: This unit is not factory set to FP#0

Wiring

RED:	To +VDC (fuse @ 3A)
BLACK:	To Chassis Ground
WHITE:	For Steady Burn, apply +VDC
YELLOW:	Synchronization: Connect YELLOW wires of all heads together (all heads must be set at the same pattern) Simultaneous or Alternating Flash: 1. Apply +VDC to RED and YELLOW wires simultaneously to enter grouping; lighthead will display short (single or double) flashes: -Single flash = Group 1 -Double flash = Group 2 2. Momentarily apply +VDC to YELLOW wire to change groups: -Heads in the same group flash together. -Group 1 heads alternate with group 2 heads. Flash Patterns: Momentarily apply +VDC to YELLOW wire: -Once for next pattern. -Quickly three times for pattern 0.

VOLTS: 12-24 VDC, .55 Amps

