

# Installation Instructions

## 8891800 Series LED Strobe Lights

(8891800, 8891801, 8891802, 8891803, 8891804)

### WARNING

**Do not look directly into LEDs while in operation; this may cause momentary blindness and/or eye damage.**



FP#	Flash Patterns
0	Random
1	Single (split)
2	Double (split)
3	Quad (split)
4	Quint (split)
5	Mega (split)
6	Ultra (split)
7	Single-Quad (split)
8	Single H/L (split)
9	Single (all)

FP#	Flash Patterns
10	Double (all)
11	Quad (all)
12	Quint (all)
13	Mega (all)
14	Ultra (all)
15	Single-Quad (all)
16	Single H/L (all)
17	Steady (ca)
18	Steady 4 (all)

**Note:** This unit is not factory set to FP#0

### Wiring

<b>RED:</b>	To +VDC (fuse @ 3A)
<b>BLACK:</b>	To Chassis Ground
<b>WHITE:</b>	For Steady Burn, apply +VDC
<b>YELLOW:</b>	Synchronization: Connect YELLOW wires of all heads together (all heads must be set at the same pattern)
	<b>Simultaneous or Alternating Flash:</b>
	1. Apply +VDC to RED and YELLOW wires simultaneously to enter grouping; lighthead will display short (single or double) flashes: -Single flash = Group 1 -Double flash = Group 2
	2. Momentarily apply +VDC to YELLOW wire to change groups: -Heads in the same group flash together. -Group 1 heads alternate with group 2 heads.
	<b>Flash Patterns:</b> Momentarily apply +VDC to YELLOW wire: -Once for next pattern. -Quickly three times for pattern 0.

**VOLTS:** 12-24 VDC, .55 Amps

