


Installation Instructions

BPUGDM Connection Kit

- 1. Connect linkage arm to pump spool.
- 2. Connect pivot arms to pump and linkage arm.
- **3.** Connect bracket to pump using existing bolts and washers. Be sure to re-torque bolts on pump to 200 ft./ lbs. (do not estimate a torque wrench must be used).
- **4.** Connect cable using clamp to bracket as shown.
- **5.** Connect jam nut and pivot to cable rob end. Then connect assemble to linkage arm. Adjust pivot for proper operation and secure jam nut.

BPUGDMCCW

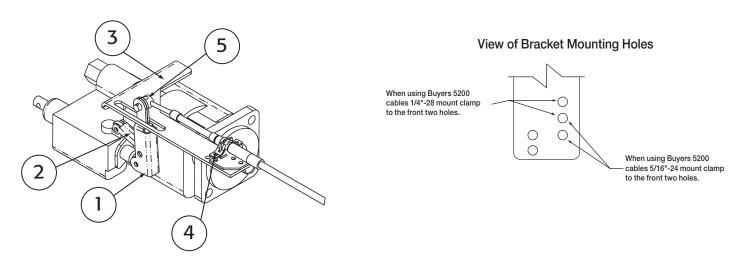

BPUGDMCW

