



# Remote Oil Filter Mounts

22-620 - 22-625

Oil Return Ports  
(line back to Engine)

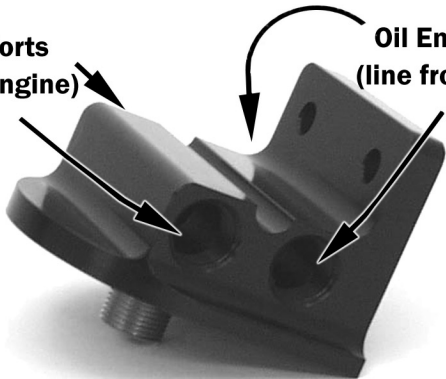

Oil Entry Ports  
(line from Engine)

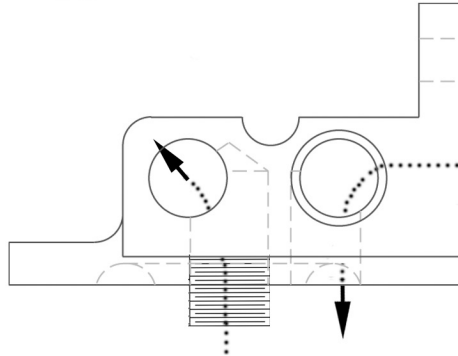

Oil Entry  
Oil from engine enters  
adapter and flows  
to outside of filter

Filtered oil back to engine

**Note:** If installing an accusump into this mount, it is best to install it on the unused oil return port.