## Installation Instructions

**T-Connector** 











# 

- Open rear tailgate and locate the vehicle jack storage compartment on the Driver's side. Remove panel and tire jack to access harness area. (1)
- Locate the tow vehicle's trailer harness connector. This harness is located in the inside of the Driver's side tire jack compartment.
- Locate the 6-pin connector, which is taped to the vehicle wiring harness. This is located at the floor of the tire jack compartment.
- 4. Remove the tape on the vehicle's plug and insert the T-Connector into the vehicle's trailer plug harness. Be sure that the T-Connector is fully inserted with locking tabs in place.
- 5. Locate a suitable grounding point near the connector such as the vehicle's frame or cross member. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure **white** wire using eyelet and screw provided.

### 

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

#### 

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

**NOTE:** Store 4-flat in jack storage compartment when not is use.

### 

- Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:
  - Max. stop/turn light: 1 per side (2.1 amps)
  - Max. tail lights: (5 amps) Read vehicle's owners manual and instruction sheet for additional information.