

## **Installation Instructions**

## **T-Connector**





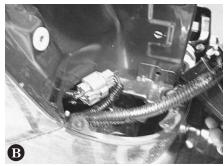

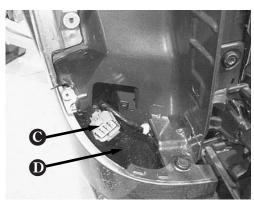



# **ENGLISH**

# **TOOLS REQUIRED:**

Screwdriver & Drill (3/32" Drill Bit)

- Open the tailgate and remove the vehicle's taillights. Carefully pry the housings away from the vehicle, being careful not to break the alignment tabs .
- Beginning on the driver's side, plug the T-Connector harness containing the yellow wire in between the vehicle's mating connectors. Be sure that the T-Connector is fully inserted with locking tabs in place.

4. Begining at the Driver's side taillight pocket, route the harness containing the green wire and the 4-Flat down the opening between the vehicle bumper and body ①. Route the 4-Flat harness to the center of the vehicle. Route harness containing the green wire underneath the vehicle up through the opening between the vehicle bumper and body to the passenger's side taillight pocket.

#### **WARNING**

Route the wire being careful to avoid any hot pipes, heat shields, the fuel tank or any other points that may pinch or break the wire.

- Repeat step 3 for the passenger's side using the T-Connector harness end with the green wire.
- 6. Locate a suitable grounding point near the connector such as the vehicle's frame or cross member. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area. Drill a 3/32" hole and secure white wire using eyelet and screw provided.

#### **CAUTION**

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

### **WARNING**

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

- 7. On the Driver's side, mount the T-Connector Black Box using the double-sided tape provided. Secure the remainder of the T-Connector harness with the cable ties provided, to prevent damage or rattling and being careful to avoid any areas that would cut or pinch the wire.
- Reinstall the taillight housing assemblies, positioning the vehicle wiring harness between the housing and the vehicle body.



#### **WARNING**

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light:
   A reservice (2.4 reserve)
- 1 per side (2.1 amps)
- Max. tail lights: (5 amps)

  Read vehicle's owners manual & instruction sheet for additional information.

Learn more about trailer hitches and towing we have.