
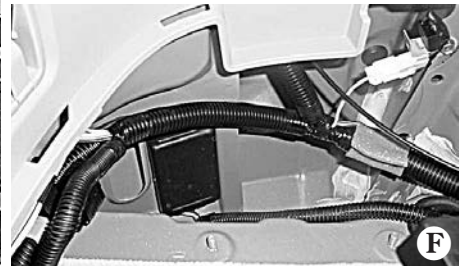


# Installation Instructions

## T-Connector

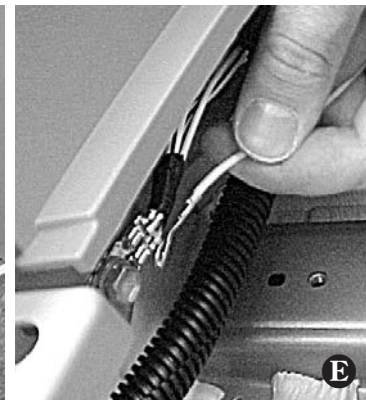

### ENGLISH

#### TOOLS NEEDED

8mm, 10mm and 13mm Socket & Ratchet or 8mm, 10mm and 13mm Wrench, Test Probe, Trim Panel Remover

#### 1. Highlander

Open the vehicle's rear tailgate. On the driver's side remove access panel to locate rear of taillight **A**. Repeat on the passenger side. Remove threshold, trunk floor panels and trays **B**. Set aside all items removed being careful not to damage parts.

#### Azera

Open trunk and remove threshold panel. Partially remove the felt trunk liner on driver's side, exposing the taillight wiring **G**.

2. On the driver and passenger sides of the vehicle, locate the vehicle's taillight wiring harness **C** & **G**. The taillight wiring harness will have a connection point, on both sides, matching the ends of the T-Connector. Separate these connectors, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.

3. On the driver's side insert the T-Connector end, with the **yellow** wire, between the vehicle wiring connectors and lock into place **D** & **G**. Be sure that connectors are fully inserted with locking tabs in place.

4. Route the T-Connector end with **green** wire to the passenger's side. Repeat step 3 on the passenger's side with T-connector end containing the **green** wire.
5. Locate the existing ground stud. Loosen bolt, place screw eyelet on stud and re-tighten bolt **F** & **G**.

#### ⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

6. Mount the T-connector **black** box using double-sided tape provided **F** & **G**. Secure the remainder of the T-connector harness with the cable ties provided. To prevent damage or rattling, be careful to avoid any areas that would cut or pinch the wire.
7. Reposition the access panels, trays and trunk floor panels and reattach the threshold.

#### NOTE

Store 4-Flat in trunk or rear cargo area when not in use.



#### ⚠ WARNING

Overloading circuit can cause fires. DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (4.2 amps)

Read vehicle's owners manual & instruction sheet for additional information.