

Installation Instructions

T-Connector



Honda Fit



Honda Civic 4 Door



Honda Accord 4 Door Sedan
Honda Accord Sedan



Mazda 3 (All Models)



A-1



B



A-2



C



TOOLS NEEDED

Philips Head Screwdriver, Trim Panel Remover, Drill (3/32" Drill Bit), 1/4" socket

1. Open trunk/hatch to locate the vehicle wiring inside the vehicle's rear cargo area by partially removing the plastic threshold cover, side access panels or carpet panels and cargo trays. **A B C**.

There will be connection points matching the ends of the T-Connector adapter on the back of each of the vehicle taillight housings. Separate this connector, being careful not to break the locking tabs. All connector surfaces should be clean and free of dirt.

07-08 HONDA FIT ONLY

Make sure to use the vehicle's **blue** 3-pin housing NOT the **green** 3-pin housing. **D E**

2. On the driver's side, attach both ends of the T-Connector containing the **yellow, brown and red** wires.
Be careful not to damage the locking tabs and be sure that connectors are fully inserted with locking tabs in place.
3. Route the T-Connector containing the **green** wire below the threshold cover to the passenger's side taillight housing.
Repeat step 2 using the T-Connector end containing the **green** wire.

4. Locate a suitable grounding point near the connector such as an existing ground stud or drill a 3/32" hole and secure the **white** wire using the eyelet and screw provided. (Do not drill into vehicle floor or bed.) Clean dirt and rustproofing from area.

⚠ CAUTION

Verify what is behind any surface prior to drilling to avoid damage to the vehicle and/or personal injury. Do not drill into any exposed surfaces.

5. Reinstall the plastic trim panels, threshold, storage covers, floor covering and other items removed during installation, being careful not to pinch or cut the wires.

⚠ WARNING

All connections must be complete for the T-Connector to function properly. Test and verify installation with a test light or trailer once installed.

NOTE

Store 4-Flat in trunk/hatch area when not in use.




⚠ WARNING

Overloading circuit can cause fires.


DO NOT exceed lower of towing manufacturer rating or:

- Max. stop/turn light: 1 per side (2.1 amps)
- Max. tail lights: (5 amps)

Read vehicle's owners manual & instruction sheet for additional information.

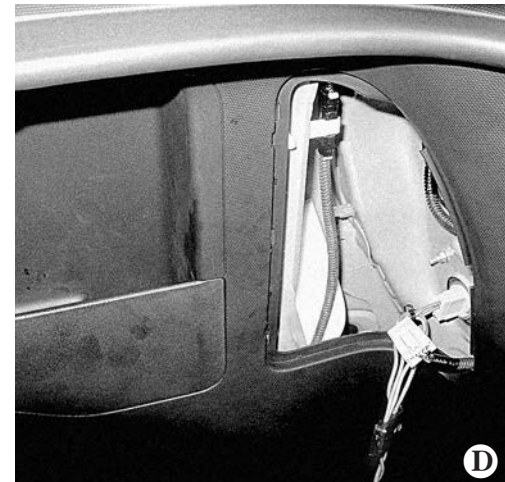

D

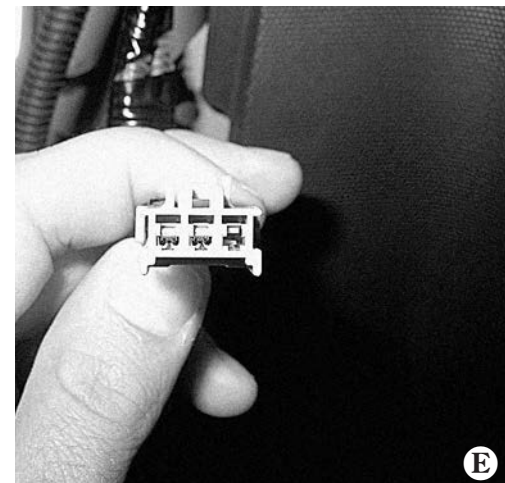

E